





- 2. STANDARD CONNECTIONS:

 - WATER AND AIR INTAKE COMPONENTS/CONNECTIONS ARE ON THE LEFT HAND SIDE $\underline{\text{ONLY}}.$ VENT FLUE ON THE RIGHT HAND SIDE. FOR ALTERNATE LOCATIONS AS SHOWN WITH DOT LINES, USE 32"(81.28) FOR VENT FLUE AT ANY SIDE AS NEED AND 24"(60.96) ALL OTHERS.
- 3. WHEN USING THE AERCÓ CONDENSATE NEUTRALIZER TANK, FOR PROPER CONDENSATE DRAINAGE, THE NEUTRALIZER TANK MUST BE INSTALLED IN A PIT OR THE BOILER AND THE AERCO CONDENSATE TRAP MUST BE ELEVATED HIGHER THAN 4" ABOVE THE FLOOR. SEE CONDENSATE TANK INSTRUCTIONS TID-0074 FOR DETAILS.
- 4. TYPICAL SEALED COMBUSTION INSTALLATION SHOWN.
- 5. INTAKE CONNECTION SIZES:
 - DIM. "A" IS 19.0" APPROX. FOR MODELS 1500, 1530 & 1912, USING 10" PIPING WITH TYPICAL 10" PVC ELBOW IS 17.06".
 - DIM. "A" IS 21.75" APPROX. FOR MODELS 2295-3060/2300-3000, USING 12" PIPING WITH TYPICAL 12" PVC ELBOW IS 19.75".

100 ORITANI DRIVE BLAUVELT, NY 10913

MODULEX EXT 1500-3000/1530-3060 MBH GAS FIRED BOILER FOR SEALED COMBUSTION INSTALLATION CLEARANCES

DWN.BY K.S. DATE 080813 SCALE NTS REV.DATE K.S. 020717

SD-A-984

В

REV.