



**NOTES:**

1. FOR ACTUAL SIZES AND LOCATIONS OF PIPING AND OTHER CONNECTIONS TO THE HEATER, SEE DIMENSIONAL DRAWING.
2. SHELL DRAIN VALVE AND CONDENSATE HOSE SHOULD BE ARRANGED TO PERMIT THE FLUIDS TO DRAIN FREELY, BY GRAVITY, TO A FLOOR DRAIN. RELIEF VALVE DISCHARGE SHOULD BE PIPED TO THE NEAREST FLOOR DRAIN. WHEN NO FLOOR DRAIN IS AVAILABLE, THE RELIEF VALVE DISCHARGE SHOULD BE PIPED VERTICALLY TO A HEIGHT 18" ABOVE THE FLOOR.
3. ALL (\*) ITEMS ARE INCLUDED SEPARATELY IN SHIPMENT.
4. THIS IS A TYPICAL INSTALLATION DRAWING. LOCAL CODES AND AUTHORITIES SHOULD BE CONSULTED.
5. LOCATE WATER INLET AND OUTLET FITTINGS (i.e. UNIONS, ELBOWS, ETC.) A MINIMUM OF 6" FROM WATER HEATER FITTINGS, TO PREVENT INTERFERENCE WITH REMOVAL OF HEATER PANELS.
6. WHEN USING THE AERCO CONDENSATE NEUTRALIZER TANK, FOR PROPER CONDENSATE DRAINAGE, THE NEUTRALIZER TANK MUST BE INSTALLED IN A PIT OR THE BOILER AND THE AERCO CONDENSATE TRAP MUST BE ELEVATED HIGHER THAN 4" ABOVE THE FLOOR. SEE CONDENSATE TANK INSTRUCTIONS TID-0074 FOR DETAILS.
7. REVIEW BENCHMARK GAS SUPPLY DESIGN GUIDE GF-2030 FOR GAS PIPING INSTALLATION INSTRUCTIONS.
8. IF AN ACS/BST IS USED, A HEADER SENSOR MUST BE INSTALLED BETWEEN 2 TO 10 FEET FROM PIPE JUNCTION.
13. CONSULT AERCO FOR ADDITIONAL INFORMATION OR DIFFERENT DESIGN CONDITIONS.
14. USE OF BALANCING VALVES IS RECOMMENDED IF THE PIPING ARRANGEMENT IS NOT REVERSE RETURN.

**AERCO** 100 ORITANI DRIVE BLAUVELT, NY 10913  
A WATTS Brand aerco.com

BENCHMARK 1500-3000 MBH  
PRIMARY SECONDARY  
MULTI-UNIT INSTALLATION

DWN. BY K.S. DATE 120412  
SCALE NTS  
APPD. \_\_\_\_\_ DATE \_\_\_\_\_

SD-A-960

REV.  
E