


NOTES:

1. ALL DIMENSIONS SHOWN ARE IN INCHES (CENTIMETERS)
2. STANDARD CONNECTIONS:
 - WATER AND AIR INTAKE COMPONENTS/CONNECTIONS ARE ON THE LEFT HAND SIDE ONLY.
 - VENT FLUE ON THE RIGHT HAND SIDE. FOR ALTERNATE LOCATIONS AS SHOWN WITH DOT LINES, USE 32"(81.28) FOR VENT FLUE AT ANY SIDE AS NEED AND 24"(60.96) ALL OTHERS.
3. WHEN USING THE AERCO CONDENSATE NEUTRALIZER TANK, FOR PROPER CONDENSATE DRAINAGE, THE NEUTRALIZER TANK MUST BE INSTALLED IN A PIT OR THE BOILER AND THE AERCO CONDENSATE TRAP MUST BE ELEVATED HIGHER THAN 4" ABOVE THE FLOOR. SEE CONDENSATE TANK INSTRUCTIONS TID-0074 FOR DETAILS.

		100 CRITANI DRIVE BLAUVELT, NY 10913 aerco.com	
MODULEX EXT 1500-3000/1530-3060 MBH GAS FIRED BOILER FOR NON-SEALED COMBUSTION INSTALLATION CLEARANCES			
DWN BY <u>K.S.</u> DATE <u>080813</u> SCALE <u>NTS</u> REV. DATE <u>K.S. 020717</u>		SD-A-983	
			REV. B