


NOTES:

1. FOR ACTUAL SIZES AND LOCATIONS OF PIPING AND OTHER CONNECTIONS TO THE HEATER, SEE DIMENSIONAL DRAWING AP-A-1055.
2. REDUCERS, ON THE WATER INLET SIDE, SHOULD BE LOCATED ADJACENT TO THE HEATER. EXPANSION FITTINGS, ON THE WATER INLET SIDE, SHOULD BE LOCATED AS FAR AS POSSIBLE FROM THE HEATER.
3. RELIEF VALVE DISCHARGE SHOULD BE PIPED TO THE NEAREST FLOOR DRAIN. WHEN NO FLOOR DRAIN IS AVAILABLE, THE RELIEF VALVE DISCHARGE SHOULD BE PIPED VERTICALLY TO A HEIGHT 18" ABOVE THE FLOOR.
4. TAP FOR AQUASTAT OR TEMPERATURE SWITCH. SWITCH WILL TURN PUMP ON AND OFF.

		100 ORITANI DRIVE BLAUVELT, NY 10913 aerco.com	
SMARTPLATE EV 150/300 PSI WATER TO WATER HEAT EXCHANGER SINGLE UNIT W/ STRATIFIED TANK			
DWN.BY <u>K.S.</u> DATE <u>071420</u> SCALE <u>NTS</u> SIZE <u>A</u> CHKD. _____ APPD. _____ REV. DATE _____		SD-A-1200	REV. A