

- FOR B.A.S. WITH RS485 COMMUNICATIONS, USE AN RS232/RS485 CONVERTER (AERCO P/N 124955).
- 4) FOR PULSE WIDTH MODULATION WIRING, SEE DRAWING SD-A-561.
- 5) FOR RS232 COMMUNICATIONS FROM BUILDING AUTOMATION SYSTEM TO BMS, SEE DRAWING SD-A-558.
- 6) ON THE CPU BOARD INSIDE THE C-MORE CONTROL PANEL OF THE LAST BOILER ONLY, TURN THE DIPSWITCHES LABELED BIAS1, TERM, AND BIAS2 TO THE "ON" POSISTION.

RS485 WIRING DÍAGRAM w/ RS485 COMMUNICATIONS FROM BLDG. AUTOMATION SYS. TO BMS

DWN.BY	CZ	DATE 020205	
SCALE _	NTS	_	en.
ADDD		DATE	J DD-

-A - 658

REV. В