



NOTES:

1. FOR ACTUAL SIZES AND LOCATIONS OF PIPING AND OTHER CONNECTIONS TO THE HEATER, SEE DIMENSIONAL DRAWING.
2. REDUCERS, ON THE WATER INLET SIDE, SHOULD BE LOCATED ADJACENT TO THE HEATER. EXPANSION FITTINGS, ON THE WATER INLET SIDE, SHOULD BE LOCATED AS FAR AS POSSIBLE FROM THE HEATER.
3. DRAIN VALVE SHOULD BE PIPED DIRECTLY TO A FLOOR DRAIN. RELIEF VALVE DISCHARGE SHOULD BE PIPED TO THE NEAREST FLOOR DRAIN. WHEN NO FLOOR DRAIN IS AVAILABLE, THE RELIEF VALVE DISCHARGE SHOULD BE PIPED VERTICALLY TO A HEIGHT 18" ABOVE THE FLOOR.
4. REFER TO SMARTPLATE APPLICATIONS GUIDE, SP-1010, TO DETERMINE IF SYSTEM REQUIRES A BUFFER TANK.
5. INSTALL A HOSE CONNECTION AT THE HOT WATER OUTLET.

AERCO INTERNATIONAL, INC. <small>Blauvelt, NY 10913</small>		
SMARTPLATE WATER TO WATER HEAT EXCHANGER SINGLE UNIT W/ ACCUMULATOR TANK		
DWN. BY <u>K.S.</u> DATE <u>010713</u> SCALE <u>NTS</u> APPD. _____ DATE _____	SD-A-776	REV. C