


**NOTES:**

1. FOR ACTUAL SIZES AND LOCATIONS OF PIPING AND OTHER CONNECTIONS TO THE HEATER, SEE DIMENSIONAL DRAWING.
2. SHELL DRAIN VALVE AND CONDENSATE HOSE SHOULD BE ARRANGED TO PERMIT THE FLUIDS TO DRAIN FREELY, BY GRAVITY, TO A FLOOR DRAIN. RELIEF VALVE DISCHARGE SHOULD BE PIPED TO THE NEAREST FLOOR DRAIN. WHEN NO FLOOR DRAIN IS AVAILABLE, THE RELIEF VALVE DISCHARGE SHOULD BE PIPED VERTICALLY TO A HEIGHT 18" ABOVE THE FLOOR.
3. ALL (\*) ITEMS ARE INCLUDED SEPARATELY IN SHIPMENT.
4. LOCATE WATER INLET AND OUTLET FITTINGS (i.e.UNIONS, ELBOWS, ETC.) A MINIMUM OF 6" FROM HEATER FITTINGS, TO PREVENT INTERFERENCE WITH REMOVAL OF BOILER PANELS AND COVERS. ALL PIPING AND ELECTRIC CONNECTIONS (SERVICE SWITCHES, CONDUIT BOXES) SHOULD LIKEWISE BE 6" AWAY FROM SIDE PANELS.
5. BOILER PUMP MUST BE SIZED TO PROVIDE THE APPROPRIATE FLOW AT THE DESIGN  $\Delta T$  OF BOILER PLANT. MAXIMUM  $\Delta T$  ACROSS BOILER IS 100°F. BOILER PUMP MUST MAINTAIN CFR BOILER(S) REQUIRED MINIMUM FLOW OF 25 GPM.
6. THIS IS A TYPICAL INSTALLATION DRAWING. LOCAL CODES AND AUTHORITIES SHOULD BE CONSULTED.
7. WHEN USING THE AERCO CONDENSATE NEUTRALIZER TANK, FOR PROPER CONDENSATE DRAINAGE, THE NEUTRALIZER TANK MUST BE INSTALLED IN A PIT OR THE BOILER AND THE AERCO CONDENSATE TRAP MUST BE ELEVATED 4" OR HIGHER ABOVE THE FLOOR. SEE CONDENSATE TANK INSTRUCTIONS TID-0074 FOR DETAILS.
8. REVIEW CFR BOILER GAS SUPPLY DESIGN GUIDE TAG-0106 FOR GAS PIPING INSTALLATION INSTRUCTIONS.
9. HEADER SENSOR MUST BE INSTALLED BETWEEN 2 TO 10 FEET FROM JUNCTION AND FROM LAST UNIT.
10. CONSULT AERCO FOR ADDITIONAL INFORMATION OR DIFFERENT DESIGN CONDITIONS.
11. USE OF BALANCING VALVES IS RECOMMENDED IF THE PIPING ARRANGEMENT IS NOT REVERSE RETURN.

		100 ORITANI DRIVE BLAUVELT, NY 10913 aerco.com	
<b>CFR BOILER MULTI UNIT INSTALLATION</b>			
DWN. BY <u>K.S.</u> DATE <u>051723</u> SCALE <u>NTS</u> APPD. _____ DATE _____	SD-A-1276		REV. A