

Dual fuel light oil/gas burners

Progressive two-stage or modulating operation



CODE	MODEL
C9354400 - C9354410 - C9354401	RLS 160/E
C9355400 - C9355410	RLS 200/E



Original instructions

1	Information and general instructions	3
1.1	Information about the instruction manual	3
1.1.1	Introduction	3
1.1.2	General dangers	3
1.1.3	Other symbols	3
1.1.4	Delivery of the system and the instruction manual	4
1.2	Guarantee and responsibility	4
2	Safety and prevention	5
2.1	Introduction	5
2.2	Personnel training	5
3	Technical description of the burner	6
3.1	Technical data	6
3.2	Electrical data	6
3.3	Burner models designation	7
3.4	Packaging - weight - Approximate measurements	7
3.5	Burner dimensions	8
3.6	Standard equipment	8
3.7	Firing rates	9
3.7.1	Procedure to refer burner operating condition in high altitude plants	9
3.8	Minimum furnace dimensions	11
3.9	Commercial boilers	11
3.10	Burner description	12
3.11	Control box for the air/fuel ratio (LMV36...)	14
3.12	Actuators (SQM33.5...)	17
4	Installation	18
4.1	Notes on safety for the installation	18
4.2	Handling	18
4.3	Preliminary checks	18
4.4	Burner raising	19
4.5	Preparing the boiler	19
4.5.1	Boring the boiler plate	19
4.5.2	Blast tube length	19
4.6	Securing the burner to the boiler	20
4.7	Combustion head calibration	20
4.8	Combustion head setting	21
4.9	Nozzle	22
4.9.1	Nozzle assembly	22
4.9.2	Adjusting the nozzle flow rate	23
4.10	Electrode and ignition pilot adjustment	24
4.11	Burner refitting	24
4.12	Light oil supply	25
4.12.1	Double-pipe circuit	25
4.12.2	The loop circuit	25
4.12.3	Hydraulic connections	26
4.12.4	Pump	26
4.12.5	Pump priming	26
4.13	Gas line	27
4.14	Gas train	27
4.14.1	Gas pressure	28
4.15	Electrical wiring	29

4.15.1	Supply cables and external connections passage	30
4.16	Thermal relay calibration	31
4.16.1	Electro-mechanical thermal relay	31
4.16.2	Electronic thermal relay	31
4.17	Motor connection at 208-230 or 460V	32
4.18	Motor connection at 575V	32
4.19	Reversible direction	32
5	Start-up, calibration and operation of the burner	33
5.1	Notes on safety for the first start-up	33
5.2	Adjustments prior to ignition (light oil)	33
5.2.1	Combustion head setting	33
5.2.2	Nozzle	33
5.2.3	Pump adjustment	33
5.2.4	Air damper adjustment	33
5.3	Burner firing	33
5.4	Burner calibration	33
5.5	Adjustments before first firing (gas)	34
5.6	Burner start-up	34
5.6.1	Adjusting oil/air delivery	34
5.6.2	Adjusting gas/air delivery	34
5.7	Final calibration of the pressure switches	35
5.7.1	Air pressure switch	35
5.7.2	Maximum gas pressure switch	35
5.7.3	Minimum gas pressure switch	36
5.7.4	Low oil pressure switch	36
5.7.5	High oil pressure switch	36
5.8	Burner starting	37
5.8.1	Steady state operation	37
5.8.2	Firing failure	37
5.9	Flame signal measurement	38
5.10	Final checks (with the burner working)	38
6	Maintenance	39
6.1	Notes on safety for the maintenance	39
6.2	Maintenance programme	39
6.2.1	Maintenance frequency	39
6.2.2	Checking and cleaning	39
6.3	Opening the burner	41
6.4	Closing the burner	41
7	Faults - Possible causes - Solutions	42
A	Appendix - Spare parts	43
B	Appendix - Accessories	47
C	Appendix - Burner start up report	48

1 Information and general instructions

1.1 Information about the instruction manual

1.1.1 Introduction

The instruction manual supplied with the burner:

- is an integral and essential part of the product and must not be separated from it; it must therefore be kept carefully for any necessary consultation and must accompany the burner even if it is transferred to another owner or user, or to another system. If the manual is lost or damaged, another copy must be requested from the Technical Assistance Service of the area;
- is designed for use by qualified personnel;
- offers important indications and instructions relating to the installation safety, start-up, use and maintenance of the burner.

Symbols used in the manual

In some parts of the manual you will see triangular DANGER signs. Pay great attention to these, as they indicate a situation of potential danger.

1.1.2 General dangers

The **dangers** can be of **3 levels**, as indicated below.



DANGER

Maximum danger level!
This symbol indicates operations which, if not carried out correctly, cause serious injury, death or long-term health risks.



WARNING

This symbol indicates operations which, if not carried out correctly, may cause serious injury, death or long-term health risks.



CAUTION

This symbol indicates operations which, if not carried out correctly, may cause damage to the machine and/or injury to people.

1.1.3 Other symbols



DANGER

DANGER: LIVE COMPONENTS
This symbol indicates operations which, if not carried out correctly, lead to electric shocks with lethal consequences.



DANGER: FLAMMABLE MATERIAL
This symbol indicates the presence of flammable materials.



DANGER: BURNING
This symbol indicates the risks of burns due to high temperatures.



DANGER: CRUSHING OF LIMBS
This symbol indicates the presence of moving parts: danger of crushing of limbs.



WARNING: MOVING PARTS
This symbol indicates that you must keep limbs away from moving mechanical parts; danger of crushing.



DANGER: EXPLOSION
This symbol signals places where an explosive atmosphere may be present. An explosive atmosphere is defined as a mixture - under atmospheric conditions - of air and flammable substances in the form of gases, vapours, mist or dust in which, after ignition has occurred, combustion spreads to the entire unburned mixture.



PERSONAL PROTECTION EQUIPMENT
These symbols indicate the equipment that must be worn and kept by the operator for protection against threats against safety and/or health while at work.



OBLIGATION TO ASSEMBLE THE HOOD AND ALL THE SAFETY AND PROTECTION DEVICES
This symbol signals the obligation to reassemble the hood and all the safety and protection devices of the burner after any maintenance, cleaning or checking operations.



ENVIRONMENTAL PROTECTION
This symbol gives indications for the use of the machine with respect for the environment.



IMPORTANT INFORMATION
This symbol indicates important information that you must bear in mind.

- This symbol indicates a list.

Abbreviations used

Ch.	Chapter
Fig.	Figure
Page	Page
Sec.	Section
Tab.	Table

1.1.4 Delivery of the system and the instruction manual

When the system is delivered, it is important that:

- the instruction manual is delivered to the user by the system manufacturer, with the recommendation to keep it in the room where the heat generator is to be installed.
- The instruction manual shows:
 - the serial number of the burner;

.....

- the address and telephone number of the nearest Assistance Centre.

.....

.....

.....

- The system supplier must carefully inform the user about:
 - the use of the system;
 - any further tests that may be required before activating the system;
 - maintenance, and the need to have the system checked at least once a year by a representative of the manufacturer or another specialised technician.
 To ensure a periodic check, the manufacturer recommends the drawing up of a Maintenance Contract.

1.2 Guarantee and responsibility

The manufacturer guarantees its new products from the installation date, in accordance with the regulations in force and/or the sales contract. At the moment of the first start-up, check that the burner is integral and complete.



WARNING

Failure to observe the information given in this manual, operating negligence, incorrect installation and carrying out of non authorised modifications will result in the annulment by the manufacturer of the guarantee that it supplies with the burner.

In particular, the rights to the guarantee and the responsibility will no longer be valid, in the event of damage to things or injury to people, if such damage/injury was due to any of the following causes:

- incorrect installation, start-up, use and maintenance of the burner;
- improper, incorrect or unreasonable use of the burner;
- intervention of unqualified personnel;
- carrying out of unauthorised modifications on the equipment;
- use of the burner with safety devices that are faulty, incorrectly applied and/or not working;
- installation of untested supplementary components on the burner;
- powering of the burner with unsuitable fuels;
- faults in the fuel supply system;
- use of the burner even following an error and/or an irregularity;
- repairs and/or overhauls incorrectly carried out;
- modification of the combustion chamber with inserts that prevent the regular development of the structurally established flame;
- insufficient and inappropriate surveillance and care of those burner components most likely to be subject to wear and tear;
- the use of non-original components, including spare parts, kits, accessories and optional;
- force majeure.

The manufacturer furthermore declines any and every responsibility for the failure to observe the contents of this manual.

2 Safety and prevention

2.1 Introduction

The burners have been designed and built in compliance with current regulations and directives, applying the known technical rules of safety and envisaging all the potential danger situations.

It is necessary, however, to bear in mind that the imprudent and clumsy use of the equipment may lead to situations of death risk for the user or third parties, as well as the damaging of the burner or other items. Inattention, thoughtlessness and excessive confidence often cause accidents; the same applies to tiredness and sleepiness.

It is a good idea to remember the following:

- The burner must only be used as expressly described. Any other use should be considered improper and therefore dangerous.

In particular:

it can be applied to boilers operating with water, steam, diathermic oil, and to other uses expressly named by the manufacturer;

the type and pressure of the fuel, the voltage and frequency of the electrical power supply, the minimum and maximum deliveries for which the burner has been regulated, the pressurisation of the combustion chamber, the dimensions of the combustion chamber and the room temperature must all be within the values indicated in the instruction manual.

- Modification of the burner to alter its performance and destinations is not allowed.
- The burner must be used in exemplary technical safety conditions. Any disturbances that could compromise safety must be quickly eliminated.
- Opening or tampering with the burner components is not allowed, apart from the parts requiring maintenance.
- Only those parts envisaged by the manufacturer can be replaced.



The manufacturer guarantees safety and proper functioning only if all burner components are intact and positioned correctly.

2.2 Personnel training

The user is the person, body or company that has acquired the machine and intends to use it for the specific purpose. He is responsible for the machine and for the training of the people working around it.

The user:

- Undertakes to entrust the machine exclusively to suitably trained and qualified personnel;
- Undertakes to inform his personnel in a suitable way about the application and observance of the safety instructions. With that aim, he undertakes to ensure that everyone knows the use and safety instructions for his own duties;
- Personnel must observe all the danger and caution indications shown on the machine.
- Personnel must not carry out, on their own initiative, operations or interventions that are not within their province.
- Personnel must inform their superiors of every problem or dangerous situation that may arise.
- The assembly of parts of other makes, or any modifications, can alter the characteristics of the machine and hence compromise operating safety. The manufacturer therefore declines any and every responsibility for any damage that may be caused by the use of non-original parts.

In addition:



- the user must take all the measures necessary to prevent unauthorised people gaining access to the machine;
- the user must inform the manufacturer if faults or malfunctioning of the accident prevention systems are noticed, along with any presumed danger situation.
- personnel must always use the personal protective equipment envisaged by legislation and follow the indications given in this manual.

3 Technical description of the burner

3.1 Technical data

Model		RLS 160/E		RLS 200/E	
Output ⁽¹⁾ Delivery ⁽¹⁾	High	MBtu/hr ⁽⁴⁾ GPH	3542 - 7000 (6440*) 25.3 - 50 (46*)	5207 - 8870 (8055*) 37.2 - 63.3 (57.5*)	
	Low	MBtu/hr ⁽⁴⁾ GPH	1176 8.4	2100 15	
Fuel		# 2 Fuel oil - Natural gas			
Gas pressure at maximum delivery ⁽²⁾ Gas: Natural gas		" WC	5.5	10.6	
Operation		Modulating oil/gas			
Nozzle		number	1		
Standard applications		Boilers: water, steam, thermal oil			
Ambient temperature		°F	32 - 104 (0 - 40 °C)		
Combustion air temperature		°F max	140 (60 °C)		
Pump delivery (at 290 PSI) pressure range fuel temperature	GPH		146		
	PSI		102 - 580		
	° F max		302 (150 °C)		
Noise levels ⁽³⁾		dB(A)	83.1	85	

Tab. A

(¹) Firing rate for C - UL Canadian Listing (CNL).

(¹) Reference conditions: Ambient temperature 68 °F (20°C) - Barometric pressure 394" WC - Altitude 329 ft.

(²) Pressure at test point 18)(Fig. 6) with zero pressure in the combustion chamber and maximum burner output.

(³) Sound pressure measured in manufacturer's combustion laboratory, with burner operating on test boiler and at maximum rated output.

(⁴) Equivalent Btu values based on 1 USGPH = 140,000 Btu/hr.

3.2 Electrical data

Model		RLS 160/E			
RBNA Code		C9354400	C9354410	C9354401	
Control circuit power supply		V/Ph/Hz	120/1/60		
Main power supply (+/-10%)		V/Ph/Hz	230/3/60	460/3/60	575/3/60
Fan motor IE2/EPACT	rpm		3500	3500	3500
	HP		7.5	7.5	7.5
	V		230	460	575
	A		17.8	8.9	7.1
Pump motor IE2/EPACT	rpm		3530	3530	3530
	HP		1	1	1
	V		230	460	575
	A		3	1.5	1.2
Ignition transformer	Oil	V1 - V2 I1 - I2	120 V - 2 x 5 kV 2.7 A - 30 mA		
	Gas	V1 - V2 I1 - I2	120 V - 1 x 8 kV 1.6 A - 20 mA		
Electrical power consumption		W max	7000	7000	7000
Electrical control circuit cons.		W	750		
Total electrical consumption		W	7750	7750	7750
Electrical protection		NEMA 1			

Tab. B

Model		RLS 200/E	
RBNA Code		C9355400	C9355410
Control circuit power supply	V/Ph/Hz	120/1/60	
Main power supply (+/- 10%)	V/Ph/Hz	230/3/60	460/3/60
Fan motor IE2/EPACT	rpm	3500	3500
	HP	7.5	7.5
	V	230	460
	A	17.8	8.9
Pump motor IE2/EPACT	rpm	3530	3530
	HP	1	1
	V	230	460
	A	3	1.5
Ignition transformer	Oil	V1 - V2 I1 - I2	120 V - 2 x 5 kV 2.7 A - 30 mA
	Gas	V1 - V2 I1 - I2	120 V - 1 x 8 kV 1.6 A - 20 mA
Electrical power consumption	W	7000	7000
Electrical control circuit consumption	W max	750	
Total electrical consumption	W	7750	7750
Electrical protection		NEMA 1	

Tab. C

3.3 Burner models designation

Model	Code	Code RBNA	Voltage	Flame safeguard
RLS 160/E	20113149	C9354400	230/3/60	Burner mounted
		C9354410	460/3/60	
	20023415	C9354401	575/3/60	
RLS 200/E	20127086	C9355400	230/3/60	Burner mounted
		C9355410	460/3/60	

Tab. D

3.4 Packaging - weight - Approximate measurements

The burners are skid mounted. Outer dimensions of packaging are indicated in Tab. E.

The weight of the burner complete with packaging is indicated in Tab. E.

inch	A	B	C	lbs
RLS 160/E	59 1/16"	33 43/64"	39 3/8"	210
RLS 200/E	59 1/16"	33 43/64"	39 3/8"	210

Tab. E

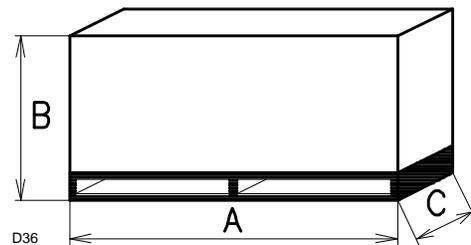


Fig. 1

3.5 Burner dimensions

The maximum dimensions of the burners are given in Fig. 2. Inspection of the combustion head requires the burner to be opened and the rear part withdrawn on the slide bars.

The maximum dimension of the burner when open, without casing, is give in measurement I.

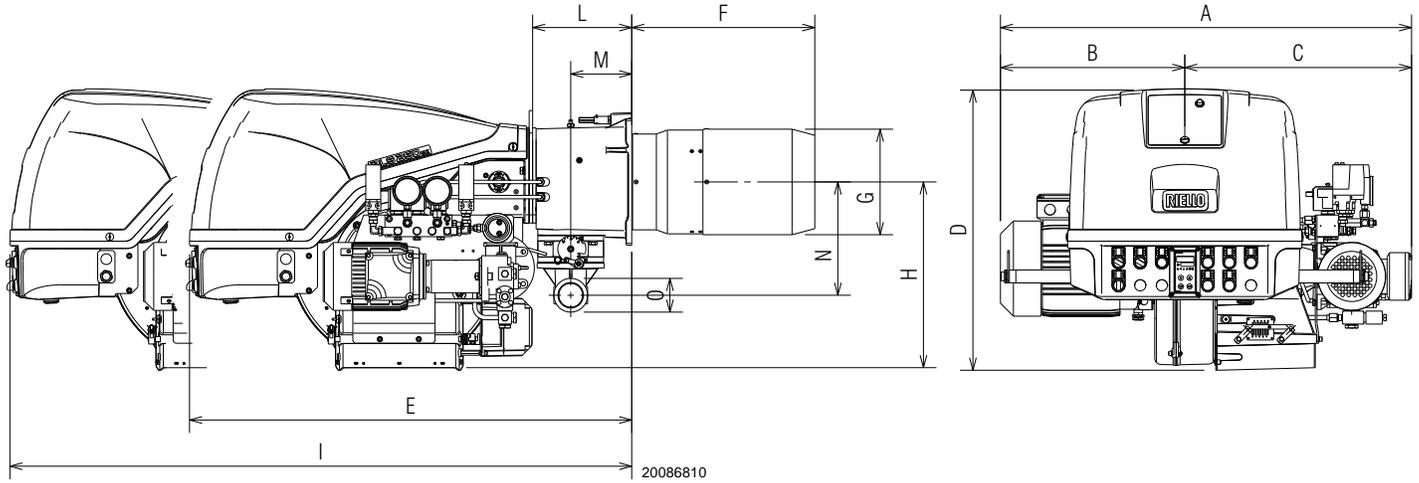


Fig. 2

Model	A	B	C	D	E	F	G	H	I	L	M	N	O
RLS 160/E	37 ¹³ / ₃₂ "	16 ⁴⁹ / ₆₄ "	20 ⁵ / ₈ "	25 ¹ / ₂ "	40 ⁶¹ / ₆₄ "	14 ³⁹ / ₆₄ "	8 ¹¹ / ₁₆ "	17 ⁵ / ₃₂ "	52 ¹ / ₂ "	8 ⁴⁵ / ₆₄ "	5 ⁹ / ₁₆ "	10 ⁵ / ₁₆ "	2"
RLS 200/E	37 ¹³ / ₃₂ "	16 ⁴⁹ / ₆₄ "	20 ⁵ / ₈ "	25 ¹ / ₂ "	40 ⁶¹ / ₆₄ "	14 ³⁹ / ₆₄ "	8 ¹¹ / ₁₆ "	17 ⁵ / ₃₂ "	52 ¹ / ₂ "	8 ⁴⁵ / ₆₄ "	5 ⁹ / ₁₆ "	10 ⁵ / ₁₆ "	2"

Tab. F

3.6 Standard equipment

- Gas train flange No. 1
- Flange fixing screws No. 4
- Adaptor G 1/4" / 1/4" NPT No. 1
- Seal for gas train flange No. 1
- Connector for pilot line No. 1
- Circular sector No. 4
- Washer for screws No. 4
- Instruction booklet No. 1

3.7 Firing rates

MAXIMUM OUTPUT must be selected in area A)(Fig. 3) or area B)(only for RLS 160/EV).

MINIMUM OUTPUT must not be lower than the minimum limit shown in the diagram.



The firing rate area values have been obtained considering an ambient temperature of 68 °F, and an atmospheric pressure of 394" WC and with the combustion head adjusted as shown on page 20.

Model	MBtu/hr	GPH
RLS 160/E	1176	8.4
RLS 200/E	2100	15

Tab. G

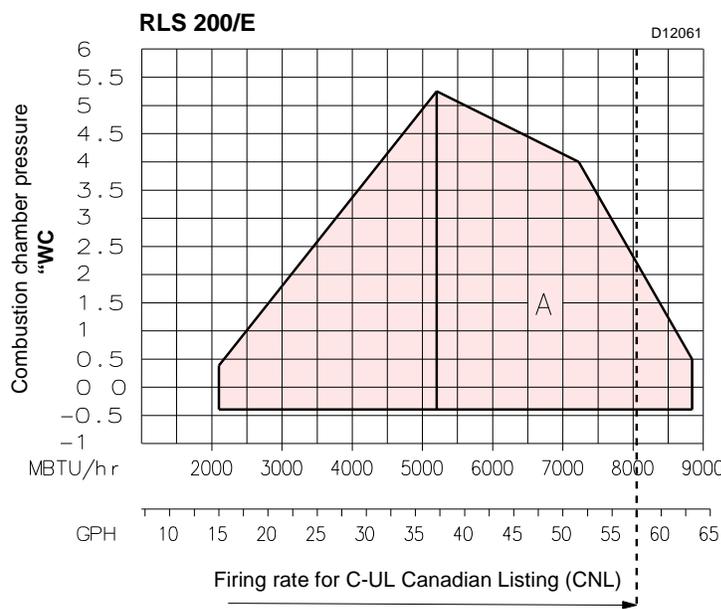
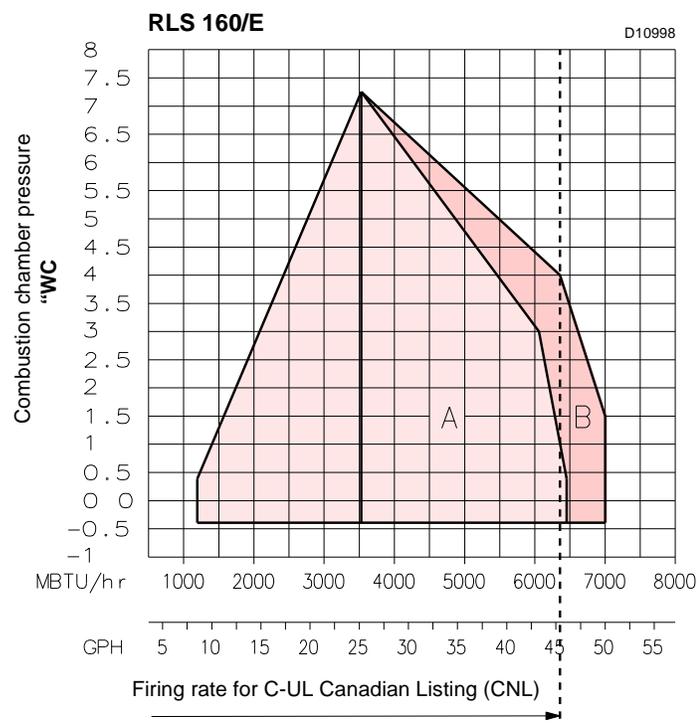


Fig. 3

3.7.1 Procedure to refer burner operating condition in high altitude plants

Find the **CORRECTED BURNER CAPACITY** for the plant's altitude in chart 1 and the **CORRECTED PRESSURE** in chart 2.

Check in the firing rate graph of the burner (Fig. 3), if the working point defined by the values above is within the range limits.

If not, higher burner size is needed.

Note

- Charts are based only on altitude variation (reference temperature = 68°F, 20°C)
- To get the combined correction in case of different air temperature, a compensation of 1000 ft each 3.6°F (305 m each 2°C) is applicable (100 ft = 0.36°F).

Example (RLS 160/E)

- Rated Capacity = 4111 MBtu/hr
- Rated Air Pressure = 2.33 "WC
- Reference Altitude = 328 ft
- Reference Temperature = 20°C = 68°F
- Real Altitude = 3000 ft
- Real Temperature = 17°C = 62.6°F

- Temperature Difference = 68°F – 62.6°F = 5.4°F
- Virtual Altitude Increment = 5.4°F/3.6°F x 1000 ft = 1500 ft
- Virtual Altitude = (Real Altitude) + (Virtual Altitude Increment) = 3000 ft + 1500 ft = 4500 ft
- Corrected Capacity = (4179+4201)/2 = 4190 MBtu/hr
- Corrected Pressure = (3.7+4.13)/2 = 3.9 "WC

Reference conditions:

- Ambient temperature 68 °F (20 °C)
- Barometric pressure 394" WC (1000 mbar)
- Altitude 328 ft a.s.l. (100 m a.s.l.).

1 CORRECTED BURNER CAPACITY ACCORDING TO ALTITUDE

Rated Capacity MBtu/hr	Altitude										
	m a.s.l.	0	100	305	610	915	1220	1525	1830	2135	2440
	ft a.s.l.	0	328	1000	2000	3000	4000	5000	6000	7000	8000
1000		995	1000	1011	1029	1048	1068	1090	1113	1137	1163
1778		1773	1778	1789	1807	1826	1846	1868	1891	1915	1941
2556		2551	2556	2567	2585	2604	2624	2646	2669	2693	2719
3333		3328	3333	3344	3362	3381	3401	3423	3446	3470	3496
4111		4106	4111	4122	4140	4159	4179	4201	4224	4248	4274
4889		4884	4889	4900	4918	4937	4957	4979	5002	5026	5052
5667		5662	5667	5678	5696	5715	5735	5757	5780	5804	5830
6444		6439	6444	6455	6473	6492	6512	6534	6557	6581	6607
7222		7217	7222	7233	7251	7270	7290	7312	7335	7359	7385
8000		7995	8000	8011	8029	8048	8068	8090	8113	8137	8163
Average barometric pressure (20°C)	mbar	1013	1000	977.4	942.8	908.2	875.8	843.5	811.85	779.8	747.8
Average barometric pressure (68°F)	"WC	399	394	385	371	358	345	332	320	307	294

2 CORRECTED BURNER AIR PRESSURE ACCORDING TO ALTITUDE

Rated Pressure "WC	Altitude										
	m a.s.l.	0	100	305	610	915	1220	1525	1830	2135	2440
	ft a.s.l.	0	328	1000	2000	3000	4000	5000	6000	7000	8000
-1		-1.11	-1	-0.77	-0.42	-0.04	0.37	0.8	1.26	1.74	2.25
0,11		0	0.11	0.34	0.69	1.07	1.48	1.91	2.37	2.85	3.36
1,22		1.11	1.22	1.45	1.8	2.18	2.59	3.02	3.48	3.96	4.47
2,33		2.22	2.33	2.56	2.91	3.29	3.7	4.13	4.59	5.07	5.58
3,44		3.33	3.44	3.67	4.02	4.4	4.81	5.24	5.7	6.18	6.69
4,56		4.45	4.56	4.79	5.14	5.52	5.93	6.36	6.82	7.3	7.81
5,67		5.56	5.67	5.9	6.25	6.63	7.04	7.47	7.93	8.41	8.92
6,78		6.67	6.78	7.01	7.36	7.74	8.15	8.58	9.04	9.52	10.03
7,89		7.78	7.89	8.12	8.47	8.85	9.26	9.69	10.15	10.63	11.14
9		8.89	9	9.23	9.58	9.96	10.37	10.8	11.26	11.74	12.25
Average barometric pressure (20°C)	mbar	1013	1000	977.4	942.8	908.2	875.8	843.5	811.85	779.8	747.8
Average barometric pressure (68°F)	"WC	399	394	385	371	358	345	332	320	307	294

3.8 Minimum furnace dimensions

The firing rates were set in relation to certified test boilers.

Example

Output 2579 MBtu/hr: diameter 24 inch - length 6.6 ft.

Fig. 4 indicates the diameter and length of the test combustion chamber.

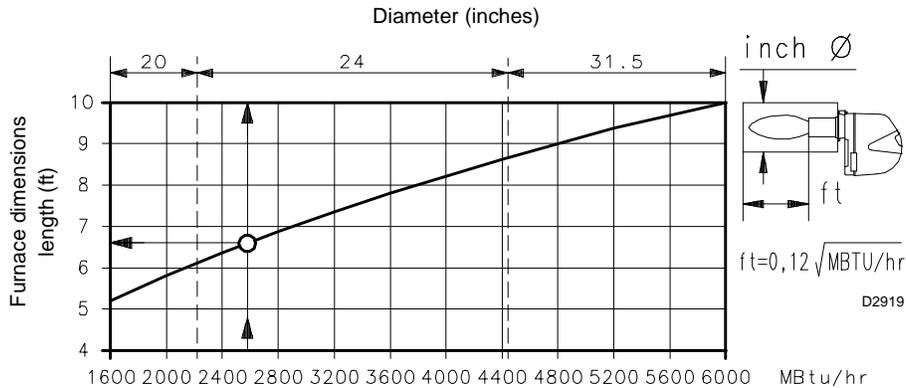


Fig. 4

3.9 Commercial boilers

The burner is suitable for operation on either flame-inversion boilers* or boilers with combustion chambers featuring flow from the base (three flue passes) on which the best results are obtained in terms of low NOx emissions.

The maximum thickness of the boiler's front door must not exceed 10" (Fig. 5).

(*) For flame inversion boilers, a kit is available to reduce CO emissions if required.

The kit includes 5 gas pipes, identical to the other 5 already fitted to the burner head. In standard conditions, the burner head is fitted with a second group of pipes, with gas outlet in a different direction with respect to the others.

With this Kit, the second group of pipes is replaced, so that all the pipes are the same.

After fitting the kit, ensure they work correctly by measuring the CO and flue gases emissions.

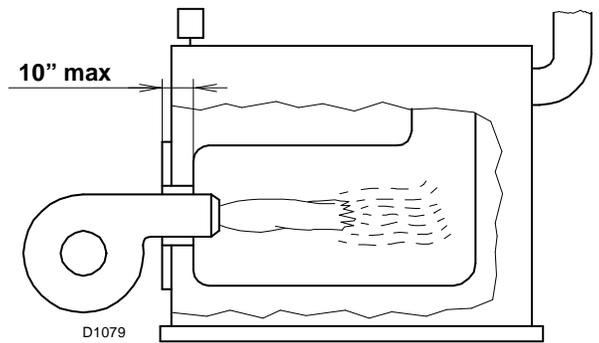


Fig. 5

3.10 Burner description

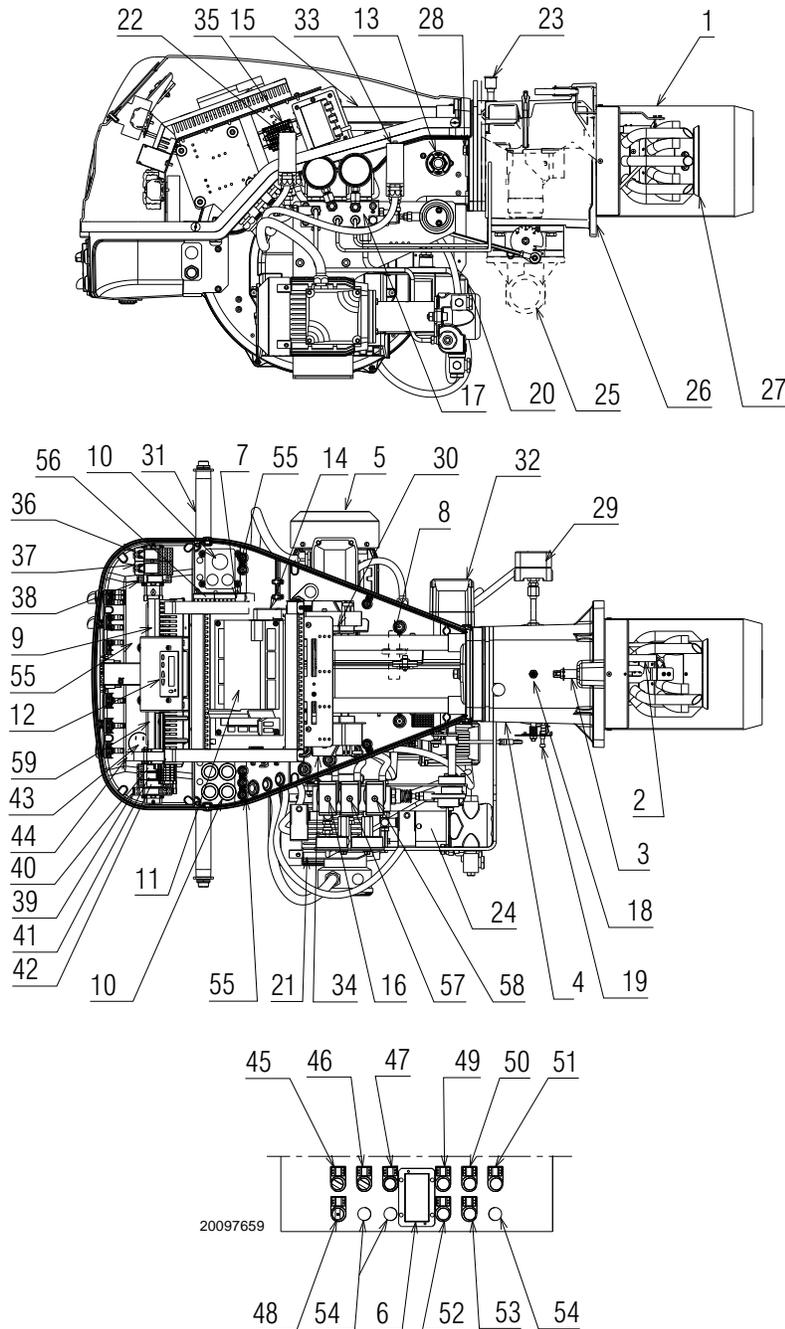


Fig. 6

- | | | | |
|----|---|----|--|
| 1 | Combustion head | 13 | Flame inspection window |
| 2 | Ignition electrodes | 14 | Low air pressure switch (differential operating type) |
| 3 | Screw for combustion head adjustment | 15 | Slide bars for opening the burner and inspecting the combustion head |
| 4 | Sleeve | 16 | Safety oil solenoid valve |
| 5 | Fan motor | 17 | Valve assembly with pressure regulator on nozzle return |
| 6 | RWF55 modulator (with analog output 4-20 mA) | 18 | Gas pressure test point and head fixing screw |
| 7 | Fan motor contactor and thermal relay with reset button | 19 | Air pressure test point |
| 8 | UV scanner | 20 | Air servomotor |
| 9 | Burner terminal strip "X1" | 21 | Pump motor |
| 10 | Holes for cables grommets for electrical wirings, accessories and power supply (to be carried out by the installer) | 22 | Low oil pressure switch |
| 11 | Control box for checking flame and air/fuel ratio | 23 | Pilot attachment |
| 12 | Operator panel with LCD display | 24 | Pump |

- 25 Gas train flange
- 26 Boiler mounting flange
- 27 Flame stability disk
- 28 Screw securing fan to sleeve
- 29 Max. gas pressure switch
- 30 Ignition transformers "T2" (for gas operation)
- 31 Lifting rings and extension bars
- 32 Oil/gas actuator
- 33 High oil pressure switch
- 34 Ignition transformer "T1" (for oil operation)
- 35 Terminal strip for oil valve "X2"
- 36 Timer module and relay "KO1"
- 37 Timer module and relay "KG1"
- 38 "K3" relay
- 39 "K1" relay
- 40 "KG2" relay
- 41 "K5" relay
- 42 "K2" relay
- 43 Horn
- 44 Auxiliary fuse
- 45 "OFF - ON" switch
- 46 "LOCAL-REMOTE" switch
- 47 "ALARM SILENCE" button
- 48 "OIL - OFF - GAS" switch
- 49 "POWER ON" signal
- 50 "CALL FOR HEAT" signal
- 51 "ALARM ON" signal
- 52 "IGNITION ON" signal
- 53 "FUEL ON" signal
- 54 Optional holes
- 55 Ground terminals
- 56 Pump motor contactor and thermal relay with reset button
- 57 Delivery oil solenoid valve
- 58 Return oil solenoid valve
- 59 DIN bar for fuse holder step-down transformer and OCI 412.10
- 60 Anchor plate for installation of step-down transformer

Three types of burner failure may occur:

- **Flame safeguard lock-out**
If the flame safeguard alarm 51)(Fig. 6) lights up, it indicates that the burner is in lock-out. To reset, press the reset push-button.
- **Fan motor trip**
release by pressing the push-button on thermal overload 7)(Fig. 6). See "Thermal relay calibration" on page 31.
- **Pump motor trip**
release by pressing the push-button on thermal overload 56)(Fig. 6). See "Thermal relay calibration" on page 31.



WARNING

For the installation and the adjustment of the high fire switch please refer to the specific manual of the device.

3.11 Control box for the air/fuel ratio (LMV36...)

Warning notes



WARNING

To avoid injury to persons, damage to property or the environment, the following warning notes must be observed!

The LMV36... is a safety device!

Do not open, interfere with or modify the unit.

The manufacturer will not assume responsibility for any damage resulting from unauthorized interference!

- All activities (mounting, installation and service work, etc.) must be performed by qualified staff.
- Before making any wiring changes in the connection area, completely isolate the plant from mains supply (all-polar disconnection). Ensure that the plant cannot be inadvertently switched on again and that it is indeed dead. If not observed, there is a risk of electric shock hazard.
- Ensure protection against electric shock hazard by providing adequate protection for the burner control's connection terminals.
- Each time work has been carried out (mounting, installation, service work, etc.), check to ensure that wiring and parameters is in an orderly state.
- Fall or shock can adversely affect the safety functions. Such units must not be put into operation, even if they do not exhibit any damage.

Introduction

The control box for the air/fuel ratio (Fig. 7), (hereafter referred to simply as the control box), that equips the burners, carries out a series of integrated functions in order to optimise burner functioning, both for single operation and together with other units (e.g. double furnace boiler or more than one generator at the same time).

The basic functions carried out by the control box relate to:

- flame control;
- the dosage of air and fuel via the positioning (with direct servo-control) of the relative valves, excluding the possible play in the mechanical cam calibration systems;
- the modulation of burner output, on the basis of the load requested by the system, maintaining the pressure or temperature of the boiler at the working values set;
- the safety diagnostic of the air and fuel circuits, via which it is possible to easily identify any causes of malfunctioning.

Mechanical design

The following system components are integrated in the LMV36... basic unit:

- Burner control with gas valve proving system
- Electronic air / fuel ratio control
- Control frequency converter air fan
- Modbus interface

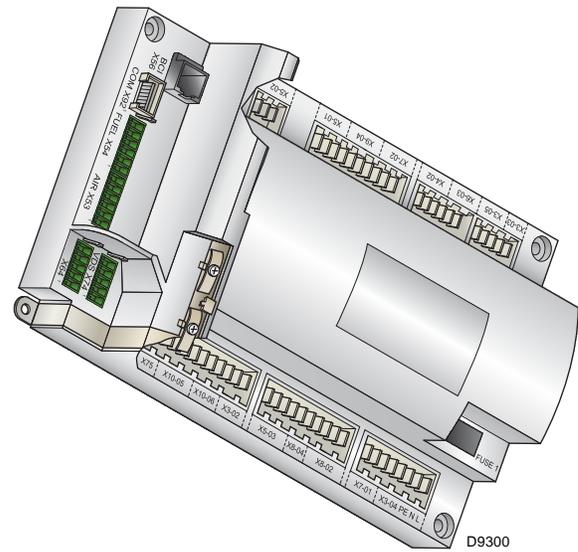


Fig. 7

Installation notes

- Always run high-voltage ignition cables separately while observing the greatest possible distance to the unit and to other cables.
- Do not mix up live and neutral conductors (fire hazard, dangerous failures, loss of protection against electric shock hazard, etc.).
- Do not lay the connecting cable from the LMV36... to the AZL2... together with other cables.



WARNING

The first start-up, like every further operation for the internal settings of the control box, requires access by means of a password and is only to be carried out by personnel of the Technical Assistance Service who have been specifically trained in the internal programming of the tool.

Electrical connection of the flame detectors

It is important to achieve practically disturbance- and loss-free signal transmission:


- Never run the detector cable together with other cables.
 - Line capacitance reduces the magnitude of the flame signal.
 - Use a separate cable.
- Observe the maximum permissible detector cable lengths.
- The ionization probe is not protected against electric shock hazard. It is mainspowered and must be protected against accidental contact.
- Locate the ignition electrode and the ionization probe such that the ignition spark cannot arc over to the ionization probe (risk of electrical overloads).

Technical data

LMV36... basic unit	Mains voltage	AC 120 V -15 % / +10 %	
	Mains frequency	50 / 60 Hz \pm 6 %	
	Power consumption	< 30 W (typically)	
	Safety class	I, with parts according to II and III to DIN EN 60730-1	
Terminal loading 'Inputs'	Unit fuse F1 (internally)	6.3 AT	
	Perm. mains primary fuse (externally)	Max. 16 AT	
	Undervoltage		
	<ul style="list-style-type: none"> • Safety shutdown from operating position at mains voltage • Restart on rise in mains voltage 	Approx. AC 93 V Approx. AC 96 V	
Terminal loading 'Outputs'	Total contact loading:		
	<ul style="list-style-type: none"> • Nominal voltage • Unit input current (safety loop) from: <ul style="list-style-type: none"> - Fan motor contactor - Ignition transformer - Valves - Oil pump / magnetic clutch 	AC 120 V, 50 / 60 Hz Max. 5 A	
	Individual contact loading:		
	Fan motor contactor		
	<ul style="list-style-type: none"> • Nominal voltage • Nominal current • Power factor 	AC 120 V, 50 / 60 Hz 1.6 A pilot duty load declaration to UL372 $\cos\phi > 0.4$	
	Alarm output		
	<ul style="list-style-type: none"> • Nominal voltage • Nominal current • Power factor 	AC 120 V, 50 / 60 Hz 1 A $\cos\phi > 0.4$	
	Ignition transformer		
	<ul style="list-style-type: none"> • Nominal voltage • Nominal current • Power factor 	AC 120 V, 50 / 60 Hz 1.6 A pilot duty load declaration to UL372 or 250 VA ignition load declaration to UL372 $\cos\phi > 0.2$	
	Fuel valves		
	<ul style="list-style-type: none"> • Nominal voltage • Nominal current • Power factor 	AC 120 V, 50 / 60 Hz 1.6 A pilot duty load declaration to UL372 $\cos\phi > 0.4$	
	Operation display		
	<ul style="list-style-type: none"> • Nominal voltage • Nominal current • Power factor 	AC 120 V, 50 / 60 Hz 0.5 A $\cos\phi > 0.4$	
	Cable lengths	Mains line	Max. 100 m (100 pF/m)
		Display, BCI	For used outside the burner cover or the control panel: Max. 3 m (100 pF/m)
	External lockout reset button	Max. 20 m (100 pF/m)	
Environmental conditions	Operation	DIN EN 60721-3-3	
	Climatic conditions	Class 3K3	
	Mechanical conditions	Class 3M3	
	Temperature range	-20...+60 °C	
	Humidity	< 95 % r.h.	

Tab. H

Operation sequence of the burner

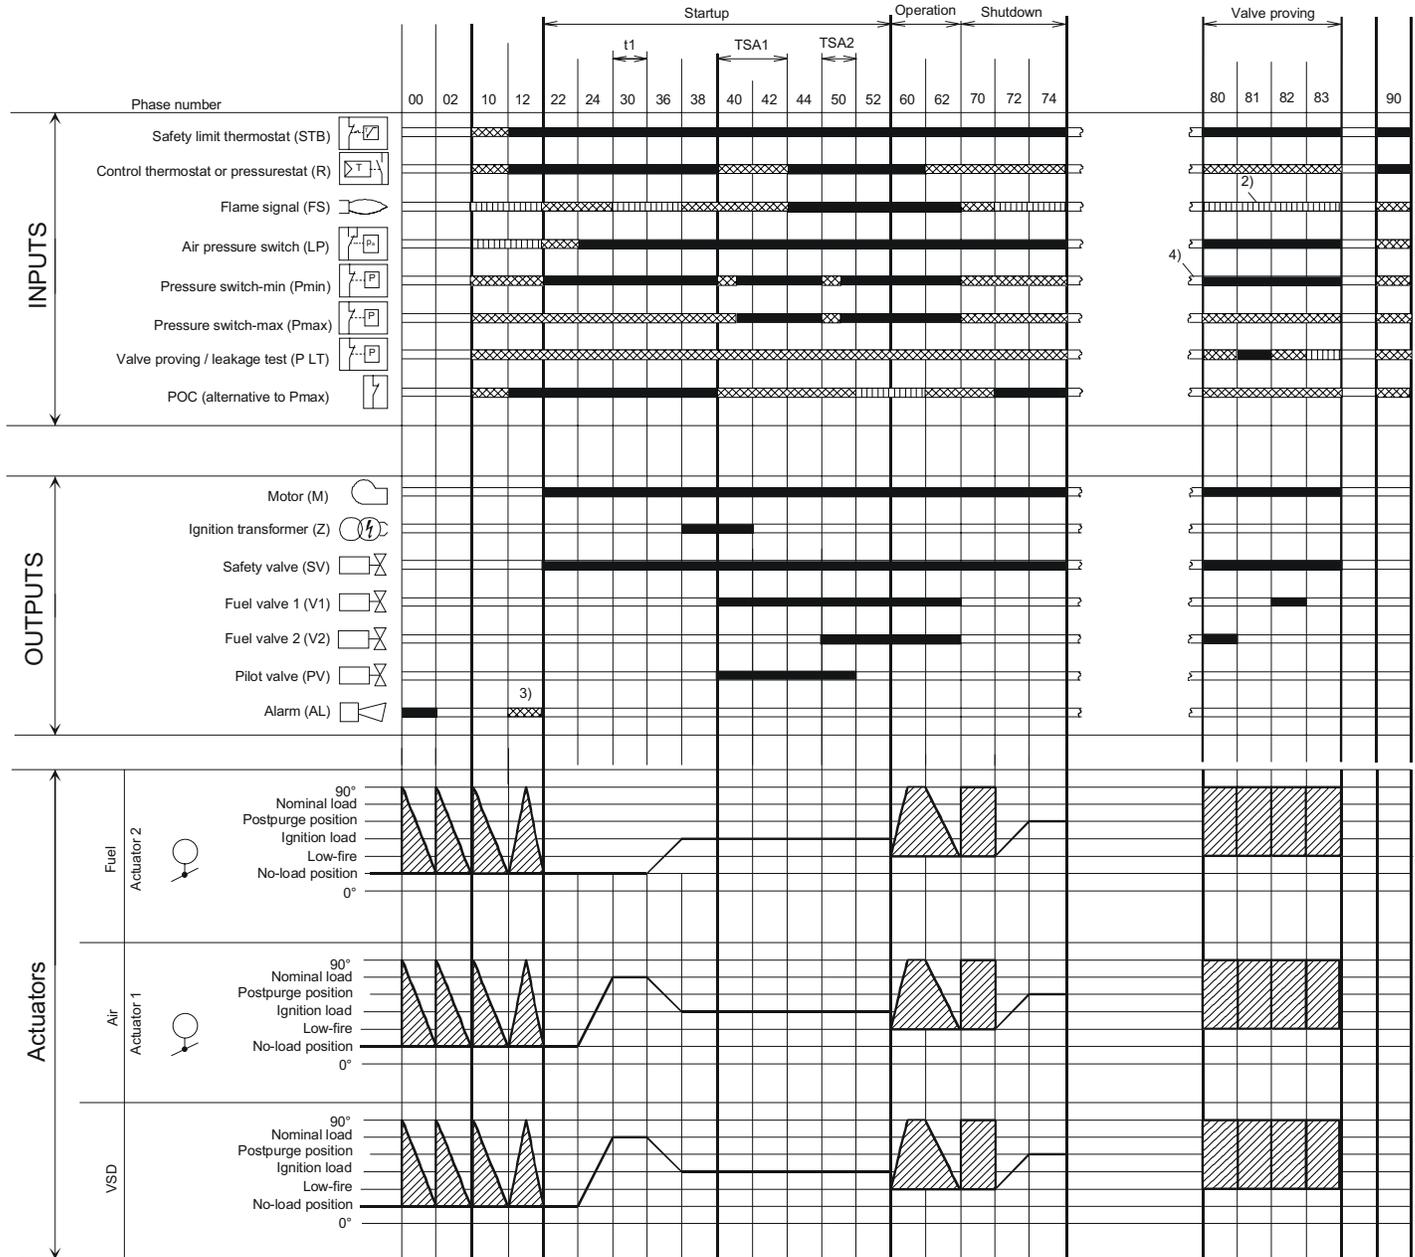

D9288

Fig. 8

Key to the sequence diagrams:

Valve proving takes place depending on the parameter:

- 2) Only with valve proving on startup
- 3) Parameter: with/without alarm in the event of start prevention
- 4) In the event of an erroneous signal on startup, followed by phase 10, otherwise phase 70
- 0° Position as supplied (0°)
- 90° Actuator fully open (90°)

- Signal ON
- Signal OFF
- Any signal is allowed



In standby: after referencing, the actuator is driven to the no-load position

Assignment of times:

- t1** Pre-purge time
- TSA1** Safety time 1 gas / oil
- TSA2** Safety time 2 gas / oil

3.12 Actuators (SQM33.5...)

Warning notes



WARNING

To avoid injury to persons, damage to property or the environment, the following warning notes should be observed!

Do not open, interfere with or modify the actuators!

- All activities (mounting, installation and service work, etc.) must be performed by qualified staff.
- Before making any wiring changes in the connection area of the units, completely isolate the equipment from mains supply (all-polar disconnection). If not observed, there is a risk of electric shock hazard.
- Ensure protection against electric shock hazard by providing adequate protection for the connection terminals and by securing the housing cover.
- After any kind of activity (mounting, installation and service work, etc.), check wiring. Also ensure that the parameters are correctly set.
- Fall or shock can adversely affect the safety functions. Such units must not be put into operation, even if they do not exhibit any damage.



WARNING

The actuator's housing must not be opened. The actuator contains an optical feedback system.

Use

The actuators (Fig. 9) are used to drive and position the air damper and the gas butterfly valve, without mechanical leverages but via the interposition of an elastic coupling.

They are commanded by the control box, which constantly checks their position by means of a return signal from the optic sensor inside the actuator.

The position (in degrees) of the actuators can be seen on the display of the Operator Panel.

Index "0" for fuel actuator, index "1" for air actuator.

Installation notes

- Always run the high-voltage ignition cables separate from the unit and other cables while observing the greatest possible distance.
- The holding torque is reduced when the actuator is disconnected from power.



WARNING

When servicing or replacing the actuators, take care not to invert the connectors.

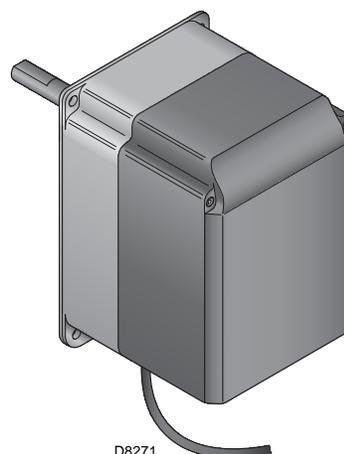


Fig. 9

Technical data

Operating voltage	AC / DC 24 V ±20 % (load on interface)
Safety class	2 to EN 60 730 part 1 and parts 2...14
Power consumption	max. 10 W
Degree of protection	IP54 to EN 60 529-1
Opening time 0 - 90°	min: 5s, max.: 120s (depending on the type of control box)
Firing rate	0 - 90°
Cable connection	RAST2,5 connectors
Direction of rotation	Clockwise/anticlockwise (can be selected from the control box)
Nominal output torque	3 Nm
Holding torque (when live)	3 Nm
Holding torque (when dead)	2.6 Nm
Weight	approx. 1 kg
Environmental conditions:	
Operation	DIN EN 60 721-3-3
Climatic conditions	class 3K5
Mechanical conditions	class 3M4
Temperature range	-20...+ 60 °C
Humidity	< 95 % r.h.

Tab. I

4

Installation

4.1 Notes on safety for the installation

After carefully cleaning all around the area where the burner will be installed, and arranging the correct lighting of the environment, proceed with the installation operations.



All the installation, maintenance and disassembly operations must be carried out with the electricity supply disconnected.



The installation of the burner must be carried out by qualified personnel, as indicated in this manual and in compliance with the standards and regulations of the laws in force.



Combustion air inside the boiler must be free from hazardous mixes (e.g.: chloride, fluoride, halogen); if present, it is highly recommended to carry out cleaning and maintenance more frequently.

4.2 Handling

The burner packaging includes a wooden platform, it is therefore possible to move the burner (still packaged) with a transpallet truck or fork lift truck.



The handling operations for the burner can be highly dangerous if not carried out with the greatest attention: keep any unauthorised people at a distance; check the integrity and suitability of the available means of handling.

Check also that the area in which you are working is empty and that there is an adequate escape area (i.e. a free, safe area to which you can quickly move if the burner should fall).

When handling, keep the load at not more than 20-25cm from the ground.



After positioning the burner near the installation point, correctly dispose of all residual packaging, separating the various types of material.



Before proceeding with the installation operations, carefully clean all around the area where the burner will be installed.

4.3 Preliminary checks

Checking the consignment



After removing all the packaging, check the integrity of the contents. In the event of doubt, do not use the burner; contact the supplier.



The packaging elements (wooden cage or cardboard box, nails, clips, plastic bags, etc.) must not be abandoned as they are potential sources of danger and pollution; they should be collected and disposed of in the appropriate places.



The output of the burner must be within the boiler's firing rate;



A burner label that has been tampered with, removed or is missing, along with anything else that prevents the definite identification of the burner makes any installation or maintenance work difficult.

4.4 Burner raising

In order to lift the burner, proceed as follows:

- screw the two extension bars 1) on the pins 2) (Fig. 10);
- place the two plates 3) fix them on the relevant ring nuts 4);

The four burner lifting points are indicated in Fig. 10.



The manufacturer declines any and every responsibility for any possible lifting movements, different from those indicated in this manual.

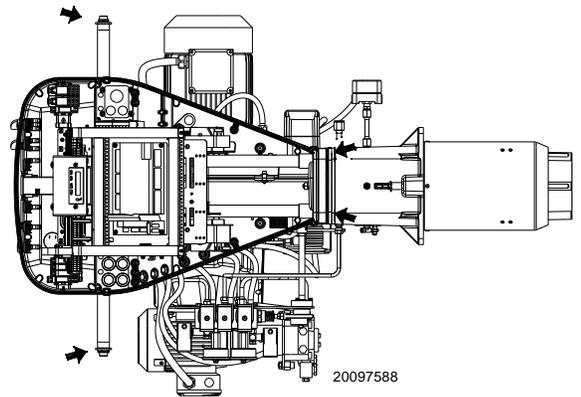
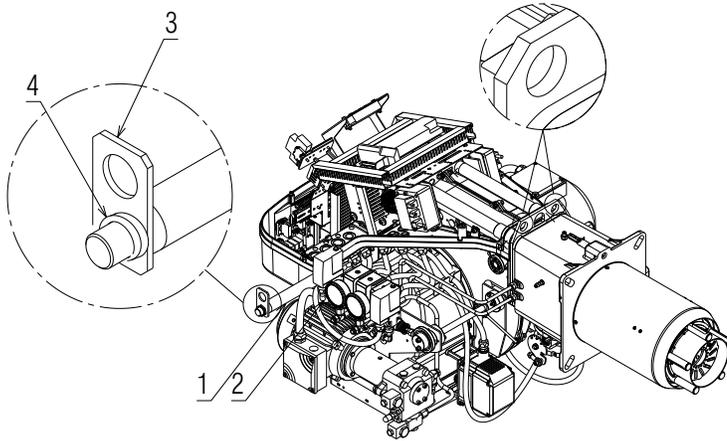


Fig. 10

4.5 Preparing the boiler

4.5.1 Boring the boiler plate

Drill the combustion chamber mounting plate as shown in (Fig. 11). The position of the threaded holes can be marked using the gasket supplied with the burner.

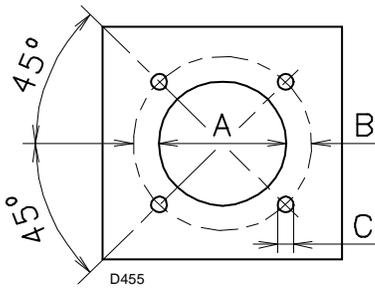


Fig. 11

inch	A	B	C
RLS 160/E	9 1/16"	12 25/32" - 14 1/2"	5/8 W
RLS 200/E	9 1/16"	12 25/32" - 14 1/2"	5/8 W

Tab. J

4.5.2 Blast tube length

The length of the blast tube must be selected according to the indications provided by the manufacturer of the boiler, it must be greater than the thickness of the boiler door complete with its insulation. The range of lengths available, L (inch), is as follows:

Model	L
RLS 160/E	14 39/64"
RLS 200/E	14 39/64"

Tab. K

For boilers with front flue passes 13) or flame inversion chambers, insulation material 11) must be inserted between the refractory 12) and the blast tube 10).

This protective insulation must not compromise the extraction of the blast tube.

For boilers having a water-cooled front, the insulation 11)-12)(Fig. 12) is not required unless it is required by the boiler manufacturer.

4.6 Securing the burner to the boiler

Detach the combustion head from the burner, (Fig. 12):

- disconnect the oil pipes by unscrewing the two connectors 6);
- loosen the 4 screws 3) and remove the cover 1);
- disengage the swivel coupling 14) from the graduated sector;
- remove the screws 2) from the slide bars 5);
- remove the 2 screws 4) and pull the burner back on slide bars 5) by about 4";

- install the extension bars 31)(Fig. 6, page 12) and re-screw the screws 2) including the safety plate 15);
- disconnect the electrode wires and then pull the burner completely off the slide bars.

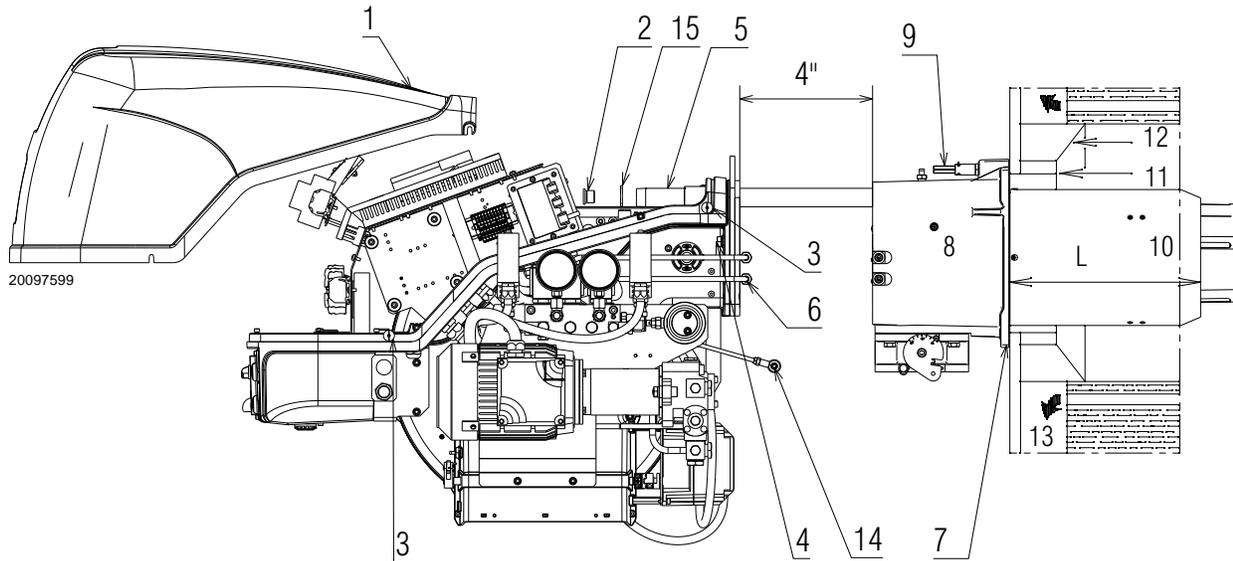


Fig. 12

4.7 Combustion head calibration

RLS 160/E (Fig. 13)

At this point check, whether the maximum delivery of the burner in 2nd stage operation is contained in area A) or in area B) of the firing rate. See "Firing rates" on page 9.

If it is in area B) then no operation is required.

If, on the other hand, it is in area A), pre-set the combustion head as below indicated:

- remove the screw 1)(Fig. 13) and extract the internal part 2);

- replace the 4 circular sectors 3) by unscrewing the relevant screws, with the circular sectors supplied with the burner.



Do not remove the circular sector 4.

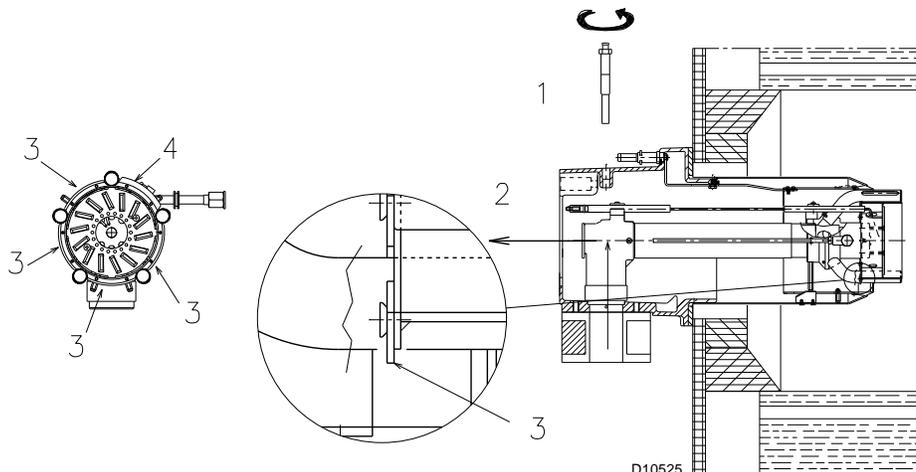


Fig. 13

RLS 200/E (Fig. 14)

In order to extract the internal combustion head, proceed as follows:

- remove screw 1)(Fig. 14);
- pull the internal part 2) until the gas distributor level (detail 3);

- turn anti-clockwise (about 90°) the internal part 4) and then extract completely the internal combustion head.

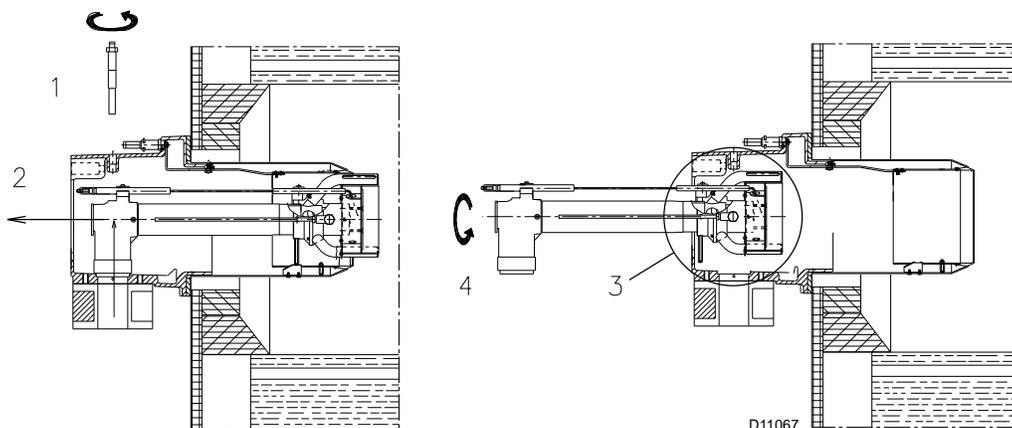


Fig. 14

4.8 Combustion head setting

The setting of the combustion head depends exclusively on the maximum delivery of the burner.

Turn screw 6)(Fig. 15) until the notch shown in diagram (Fig. 16) is level with the front surface of flange 5)(Fig. 15).

Example for RLS 200/E:

maximum burner delivery = 7250 MBtu/hr.

If diagram (Fig. 16) is consulted it is clear that for this delivery, the combustion head must be adjusted using notch 6, as shown in Fig. 15.

In case of high altitude site, head setting must refer to the “corrected capacity” according procedure described at page 9.

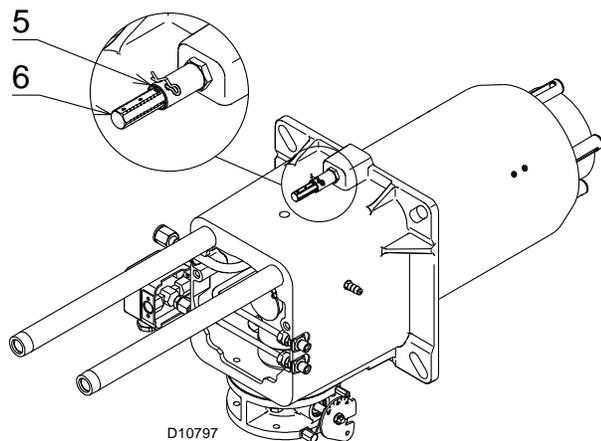


Fig. 15

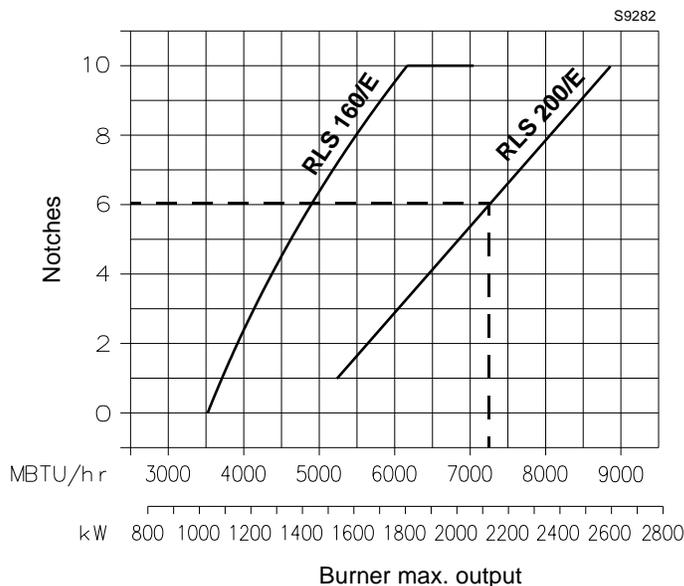


Fig. 16

4.9 Nozzle

The burner complies with the emission requirements of the UL 296 standard.

In order to guarantee that emissions do not vary, recommended and/or alternative nozzles specified by Riello in the Instruction and warning booklet should be used.



It is advisable to replace nozzles every year during regular maintenance operations.



The use of nozzles other than those specified by the Manufacturer and inadequate regular maintenance may result into emission limits non-conforming to the values set forth by the regulations in force, and in extremely serious cases, into potential hazards to people and objects.

The manufacturing company shall not be liable for any such damage arising from nonobservance of the requirements contained in this manual.

Recommended nozzles

- BERGONZO A4 45°
- DELAVAN VARIFLO 45° and 60°
- FLUIDICS KC2 30° and 45°

4.9.1 Nozzle assembly

In order to assemble the nozzle, proceed as follows:

- remove screw 1)(Fig. 17) and extract the nozzle assembly 2);
- install the nozzle 1)(Fig. 18);
- fitting the wrench through the central hole in the flame stability disk or loosen screws 1)(Fig. 19);
- remove disk 2)(Fig. 19) and replace the nozzles using the wrench 3)(Fig. 19).



- Do not use any sealing products such as gaskets, sealing compound, or tape.
- Be careful to avoid damaging the nozzle sealing seat.
- The nozzles must be screwed into place tightly but carefully.
- The nozzle for low fire operation is the one lying beneath the firing electrodes (Fig. 24).
- Make sure that the electrodes are positioned as shown in Fig. 24.

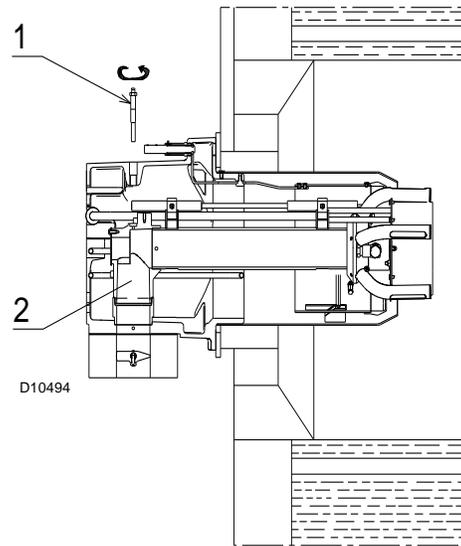


Fig. 17

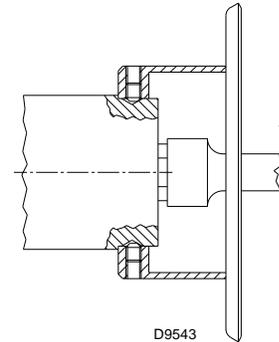


Fig. 18

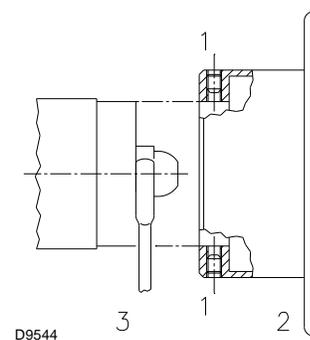


Fig. 19

4.9.2 Adjusting the nozzle flow rate

The nozzle flow rate varies according to the fuel pressure on the nozzle return.

Diagram (Fig. 21) indicates this relationship for type A4 return flow nozzles with pump delivery pressure of 290 PSI. See Fig. 21:

Horizontal axis: PSI, nozzle return pressure

Vertical axis: GPH, nozzle flow rate

The values indicated in the right side of the diagram (Fig. 21), refer to the data printed on the nozzle.

With a pump delivery pressure of 290 PSI, the pressure on the nozzle return must not exceed 246.5 PSI.

The pressure difference between pump delivery and nozzle return must be at least 43.5 PSI. With smaller pressure differences, the pressure on the nozzle return can be unstable.

The nozzle return pressure value is indicated by the pressure gauge 1)(Fig. 20).

The output and the pressure of the nozzle are at maximum when the servomotor is positioned on maximum.

The proper setting of the eccentric 6) is possible when its operation field follows the servomotor operation field (0° - 90°): so, that every variation of the servomotor position corresponds to a pressure variation.

If at the maximum capacity of the nozzle (maximum pressure in the return line) pressure fluctuations are detected on the gauge 1), slightly decrease the pressure in the return line until they are completely eliminated.

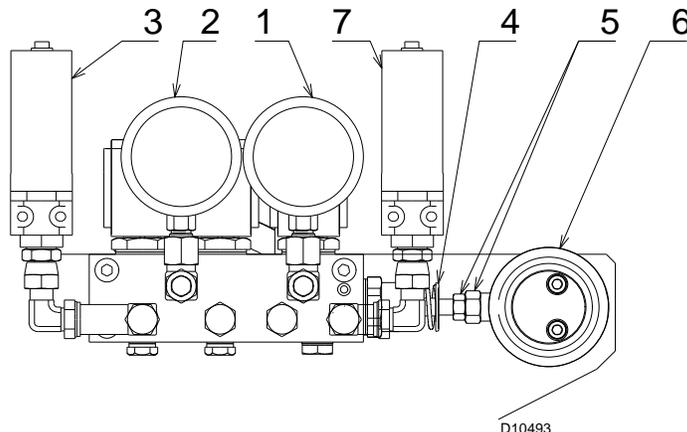


Fig. 20

- 1 Gauge for pressure in return line
- 2 Gauge for pressure in delivery line
- 3 Low oil pressure switch
- 4 Ring for piston stop
- 5 Nut and lock-nut for piston setting
- 6 Fixed eccentric
- 7 High oil pressure switch

Type A4 return flow nozzle (45°)

Delivery pressure 290 PSI

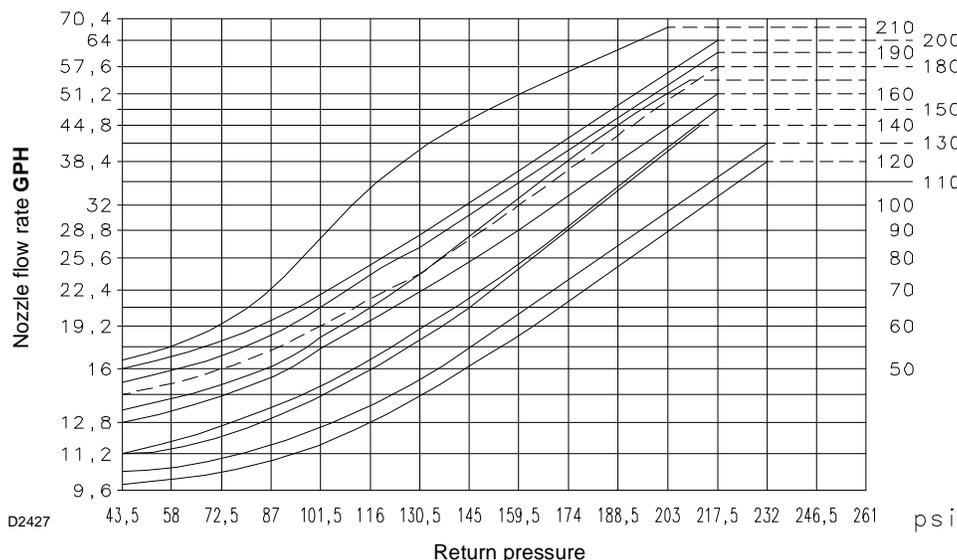


Fig. 21

The values indicated in the right side of the diagram (Fig. 21), refer to the data printed on the nozzle.

4.10 Electrode and ignition pilot adjustment

Place the pilot and electrode as shown in Fig. 22.

The pilot works correctly at pressures ranging from 6 - 12" WC.



Make sure that the electrodes are positioned as shown in Fig. 24.

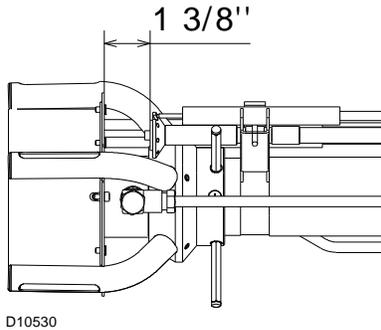


Fig. 22

ELECTRODE

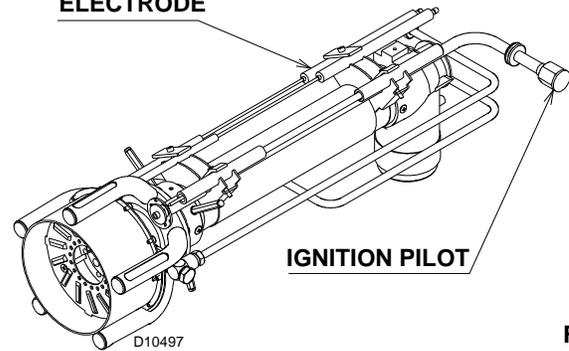


Fig. 23

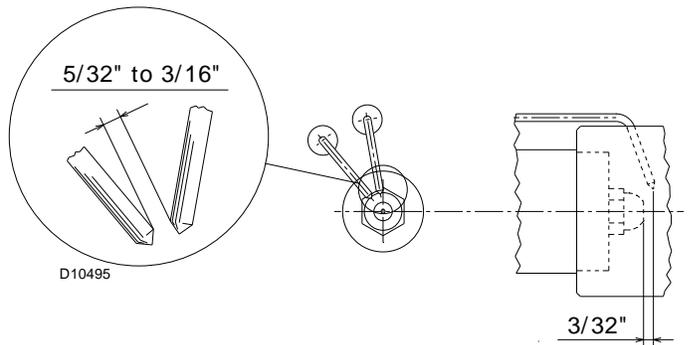


Fig. 24

4.11 Burner refitting

- Refit the burner to the slide bars 3) (Fig. 25) at approximately 4" from the sleeve 4) - burner positioned as shown in (Fig. 12, page 20) - insert the ignition electrode cables.
- Remove the extension bars 31) Fig. 6, page 12.
- Slide the burner up to the sleeve so that it is positioned as shown in (Fig. 25);
- refit screws 2) (Fig. 25) on slide bars 3) including the safety plate 15) Fig. 12, page 20;

- secure the burner to the sleeve by tightening screws 1);
- connect the oil pipes again by screwing on the two connectors 6) (Fig. 12, page 20).



When fitting the burner on the two slide bars, it is advisable to gently draw out the high tension cables until they are slightly stretched.

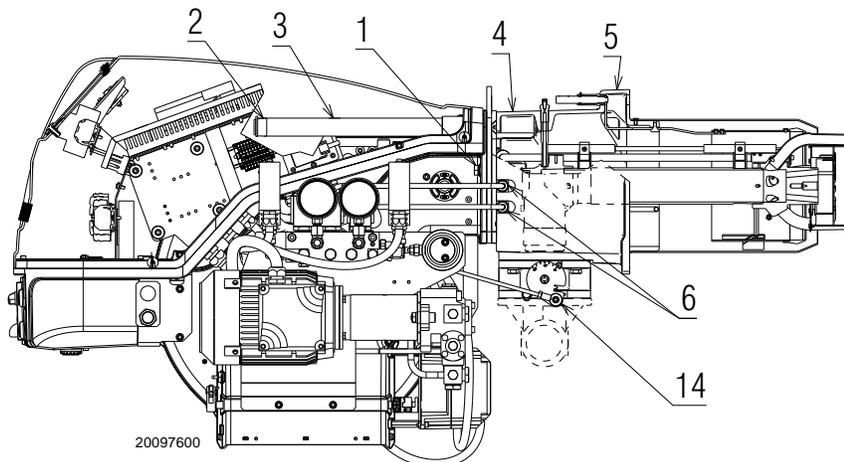


Fig. 25

4.12 Light oil supply



Explosion danger due to fuel leaks in the presence of a flammable source.

Precautions: avoid knocking, attrition, sparks and heat.

Make sure that the fuel interception tap is closed before performing any operation on the burner.



WARNING

The fuel supply line must be installed by qualified personnel, in compliance with current standards and laws.

4.12.1 Double-pipe circuit

The burner is equipped with a self-priming pump which is capable of feeding itself within the limits listed in the table at the side.

The tank higher than the burner A

Distance "P" must not exceed 33 ft in order to avoid subjecting the pump's seal to excessive strain; distance "V" must not exceed 13 ft in order to permit pump self-priming even when the tank is almost completely empty.

The tank lower than the burner B

Pump suction values higher than 13 ft must not be exceeded because at higher levels gas is released from the fuel, the pump starts making noise and its working life-span decreases.

It is good practice to ensure that the return and suction lines enter the burner from the same height; in this way it will be less probable that the suction line fails to prime or stops priming.

4.12.2 The loop circuit

A loop circuit consists of a loop of piping exiting and returning to the tank with an auxiliary pump that circulates the fuel under pressure. A branch connection from the loop goes to feed the burner.

This circuit is extremely useful whenever the burner pump does not succeed in self-priming because the tank distance and/or height difference are higher than the values listed in the Tab. L.

+ H - H (ft)	L (ft)	
	Ø (inch)	
	1/2"	5/8"
+ 13	197	263
+ 10	164	230
+ 6.6	132	197
+ 4.8	115	181
+ 3.3	99	164
+ 1.6	82	148
0	66	132
- 1.6	59	115
- 3.3	49	99
- 4.8	43	82
- 6.6	33	66
- 10	16	33
- 13	-	20

Tab. L

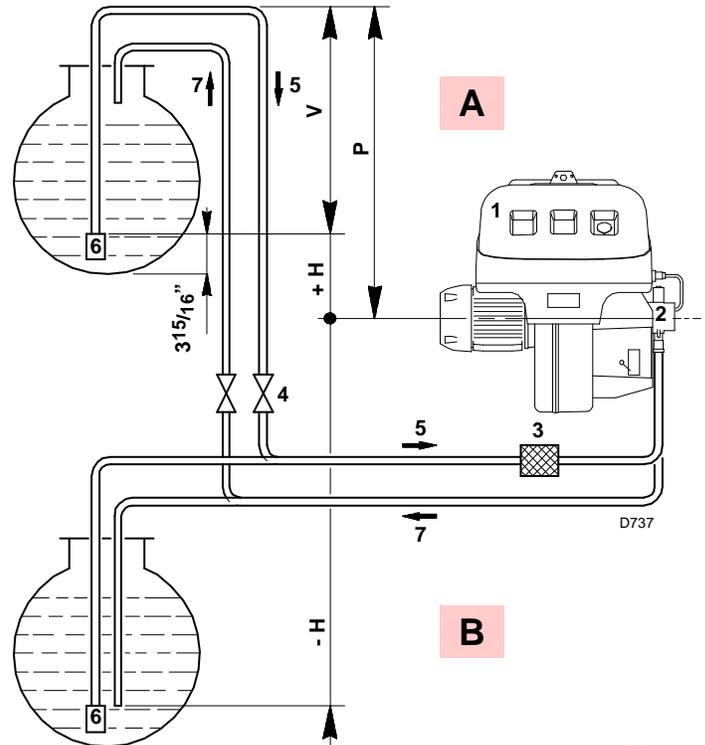


Fig. 26

- H Pump/foot valve height difference
- L Piping length
- Ø Inside pipe diameter
- 1 Burner
- 2 Pump
- 3 Filter (delivered by the Installer)*
- 4 Manual on/off valve
- 5 Suction line
- 6 Foot valve
- 7 Return line
- V Max distance 13 ft

	cm ²	inch ²
Filtering surface	181	28
Filtering degree	100 µm	

4.12.3 Hydraulic connections

The pumps are equipped with a by-pass that separates return line with suction line (Fig. 28).

The pumps are installed on the burner with the by-pass closed by screw 6)(Fig. 49, page 37).

It is therefore necessary to connect both hoses to the pump.



WARNING

The pump seal will be damaged immediately if it is run with the return line closed and the by-pass screw inserted.

Remove the plugs from the suction and return connections of the pump.

Insert the hose connections with the supplied seals into the connections and screw them down.

Take care that the hoses are not stretched or twisted during installation.

Install the hoses where they cannot be stepped on or come into contact with hot surfaces of the boiler.

Now connect the other end of the hoses to the suction and return lines.

4.12.4 Pump

Pump model TA2

Min. delivery rate at 290 PSI pressure	GPH	150
Delivery pressure range	PSI	102 - 580
Max. suction pressure	"Hg	13
Viscosity range	cSt	4 - 800
Max. light oil temperature	°F	284 (140 °C)
Max. suction and return pressure	PSI	72.5
Pressure calibration in the factory	PSI	360

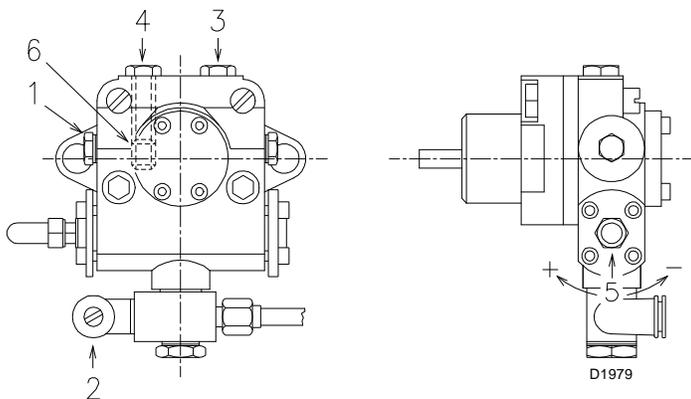


Fig. 27

Legend

- 1 Suction 1/2" NPT
- 2 Return 1/2" NPT
- 3 Pressure gauge attachmentG 1/4"
- 4 Vacuum gauge attachmentG 1/4"
- 5 Pressure adjustment screw
- 6 By-pass screw

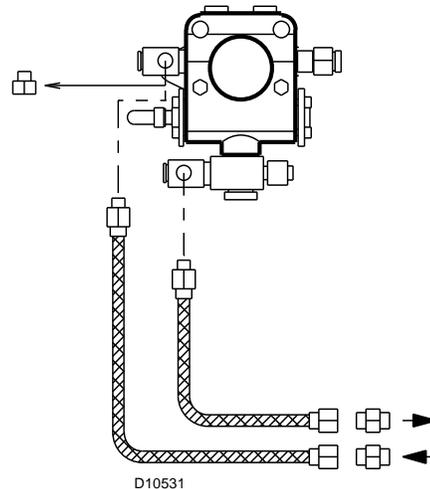


Fig. 28

4.12.5 Pump priming



WARNING

Before starting the burner, make sure that the tank return line is not clogged.

Obstructions in the line could cause the seal located on the pump shaft to break.

The time required for this operation depends upon the diameter and length of the suction tubing.

If the pump fails to prime at the first starting of the burner and the burner locks out, wait approx. 15 seconds, reset the burner, and then repeat the starting operation as often as required.

After 5 or 6 starting operations allow 2 or 3 minutes for the transformer to cool.



WARNING

The priming operation is possible because the pump is already full of fuel when it leaves the factory. If the pump has been drained, fill it with fuel through the opening on the vacuum meter prior to starting; otherwise, the pump will seize.

Whenever the length of the suction piping exceeds 66 - 98 ft, the supply line must be filled using a separate pump.

4.13 Gas line



Explosion danger due to fuel leaks in the presence of a flammable source.

Precautions: avoid knocking, attrition, sparks and heat.

Make sure the fuel interception tap is closed before performing any operation on the burner.



WARNING

The fuel supply line must be installed by qualified personnel, in compliance with current standards and laws.

The main gas train must be connected to the gas attachment 1) (Fig. 29), using flange 2), gasket 3) and screws 4) supplied with the burner.

The main gas train can enter the burner from the right or left side, see (Fig. 29).

Gas safety shut-off valves 5)-6) (Fig. 30) must be as close as possible to the burner to ensure gas reaches the combustion head within the safety time range.

The pilot gas train must be connected to the gas attachment 5) (Fig. 29) and can enter the burner from the top or bottom side.

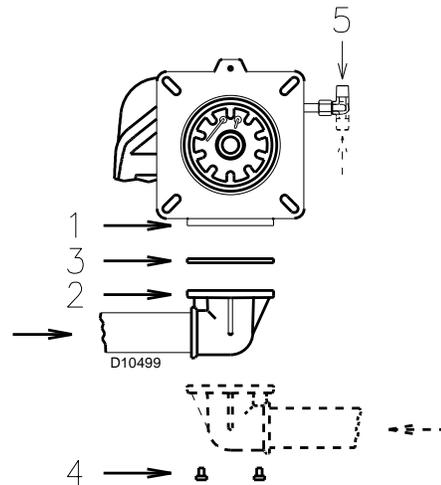


Fig. 29

4.14 Gas train

It must be type-approved according to UL Standards and is supplied separately from the burner.



WARNING

See the accompanying instructions for the adjustment of the gas train.



Check that there are no gas leaks.



Pay attention when handling the train: danger of crushing of limbs.



Make sure that the gas train is properly installed by checking for any fuel leaks.



The operator must use the required equipment during installation.

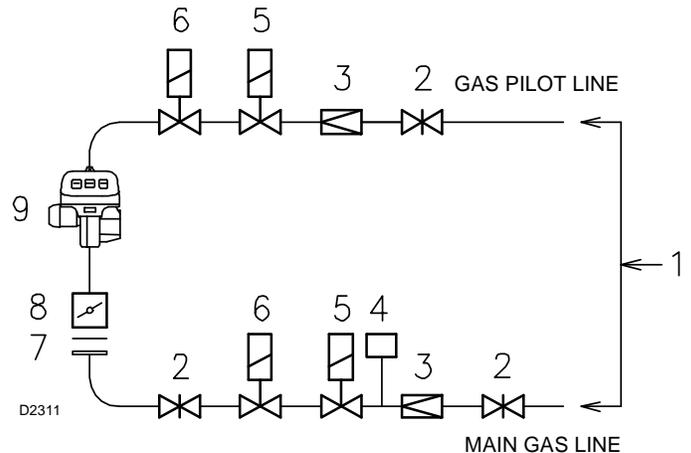


Fig. 30

Key

- 1 Gas input pipe
- 2 Manual valve
- 3 Pressure regulator
- 4 Low gas pressure switch
- 5 1st safety shut off valve
- 6 2nd safety shut off valve
- 7 Standard issue burner gasket with flange
- 8 Gas butterfly valve
- 9 Burner

4.14.1 Gas pressure

The adjacent diagrams are used to calculate manifold pressure taking into account combustion chamber pressure.

Gas manifold pressure measured at test point 1)(Fig. 32), with:

- combustion chamber at 0" WC
- burner operating at maximum output
- Combustion head adjusted as indicated in diagram (Fig. 16)

Calculate the approximate high fire output of the burner as follows:

- subtract the combustion chamber pressure from the gas pressure measured at test point 1)(Fig. 32).
- Find the nearest pressure value to your result in Fig. 31.
- Read off the corresponding output on the left.

Example for RLS 200/EV

- Maximum output operation
- Natural gas
- Gas pressure at test point 1)(Fig. 32) = 9.2" WC
- Pressure in combustion chamber = 1.2" WC
- 9.2 - 1.2 = 8" WC

A maximum output of 8.000 MBtu/hr shown in diagram corresponds to 8" WC pressure.

This value serves as a rough guide, the effective delivery must be measured at the gas meter.

	kW	MBtu/hr	Δp ("WC)*
RLS 160/E	930	3175	0.35
	996	3400	0.39
	1099	3750	0.50
	1202	4100	0.63
	1400	4780	0.86
	1500	5120	1.00
	1600	5460	1.15
	1700	5800	1.30
	1861	6350	1.50
	2051	7000	1.65
RLS 200/E	1400	4775	1.2
	1500	5120	1.4
	1600	5460	1.6
	1700	5800	1.8
	1800	6140	2.0
	1900	6480	2.3
	2000	6874	2.5
	2150	7560	3.0
	2460	8393	3.8

Tab. M

* The values are referred to the butterfly gas valve.

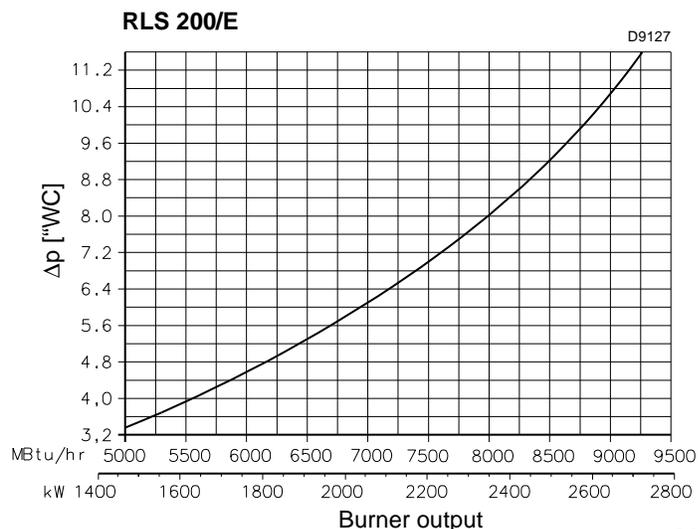
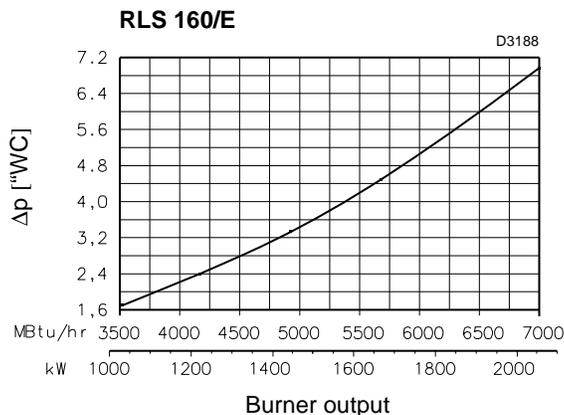


Fig. 31

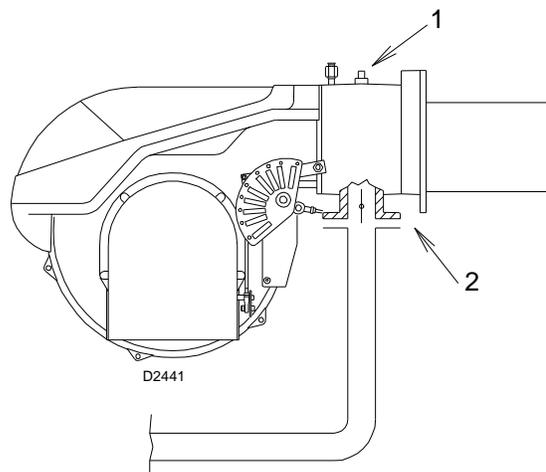


Fig. 32

4.15 Electrical wiring

Notes on safety for the electrical wiring

- The electrical wiring must be carried out with the electrical supply disconnected.
- Electrical wiring must be carried out by qualified personnel and in compliance with the regulations currently in force in the country of destination. Refer to the electrical layouts.
- The manufacturer declines all responsibility for modifications or connections different from those shown in the electrical layouts.
- Check that the electrical supply of the burner corresponds to that shown on the identification label and in this manual.
- Do not invert the neutral with the phase in the electrical supply line.
Any inversion would cause a lockout due to firing failure.
- The electrical safety of the device is obtained only when it is correctly connected to an efficient earthing system, made according to current standards.
It is necessary to check this fundamental safety requirement. In the event of doubt, have the electrical system checked by qualified personnel.
Do not use the gas tubes as an earthing system for electrical devices.
- The electrical system must be suitable for the maximum input power of the device, as indicated on the label and in the manual, checking in particular that the section of the cables is suitable for the input power of the device.
- For the main power supply of the device from the electricity mains:
 - do not use adapters, multiple sockets or extensions;
 - use an omnipolar switch with an opening of at least $\frac{1}{8}$ " (overvoltage category) between the contacts, as indicated by the current safety standards.
- Do not touch the device with wet or damp body parts and/or in bare feet.
- Do not pull the electric cables.

Before carrying out any maintenance, cleaning or checking operations:



DANGER

Disconnect the electrical supply from the burner by means of the main system switch.



DANGER

Turn off the fuel interception tap.



DANGER

Avoid condensate, ice and water leaks from forming.

4.15.1 Supply cables and external connections passage

If the cover is still present, remove it and proceed with the electrical wiring.

All the cables to be connected to the burner are fed through the grommets. See figure on the right.

The use of the cable grommets can take various forms.

By way of example we indicate the following mode (according to **UL795**):

- 1 Three phase power supply with 3/4 inch cable grommet
- 2 Available: single phase power supply and other devices with 1/2 inch cable grommet
- 3 Available: consents/safety, minimum gas pressure switch, gas valves and other devices with 3/8 inch cable grommet
- 4 Available: hole for M16
- 5 Available for ground terminals

- A Fan motor
- B Maximum gas pressure switch
- C UV sensor
- D Air servomotor
- E Fuel servomotor
- F Air pressure switch
- G Oil valve
- H Oil pressure switch
- I Pump motor

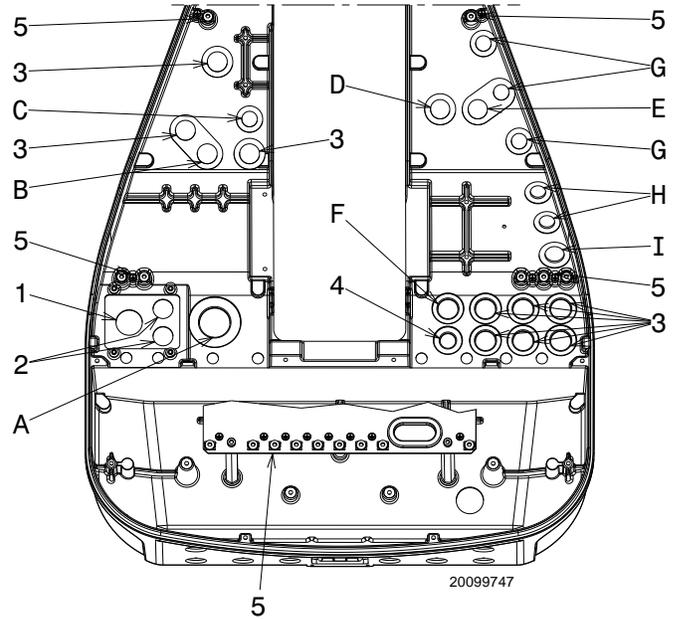


Fig. 33



WARNING

The control panel is in compliance with UL508A.



After carrying out maintenance, cleaning or checking operations, reassemble the hood and all the safety and protection devices of the burner.

4.16 Thermal relay calibration

Depending on the burner type, there are two different thermal relays:

- Electro-mechanical thermal relay (used for single phase motors)
- Electronic thermal relay (used for three phase motors)

4.16.1 Electro-mechanical thermal relay

The electro-mechanical thermal relay (Fig. 34) is used to avoid damage to the motor owing to a strong increase in absorption or the lack of a phase.

For the calibration, refer to the table given in electrical layout. If the minimum value of the scale of the thermal relay is greater than the rating absorption of the motor, protection is still ensured.

This arises when the power supply of the motor is 400V.

- To reset, in the case of an intervention of the thermal relay, press the button "RESET" (Fig. 34).
- The button "STOP" (Fig. 34) opens the NC (95-96) contact and stops the motor.

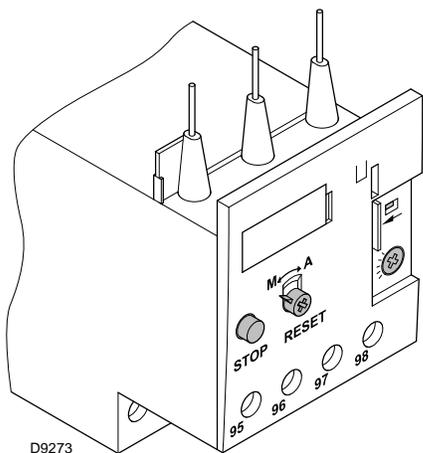


Fig. 34

- To test the thermal relay, insert a screwdriver in the window "TEST" (Fig. 35) and move it in the sense of the arrow (towards right).



Automatic resetting can be dangerous.

This action is not provided for the burner operation.

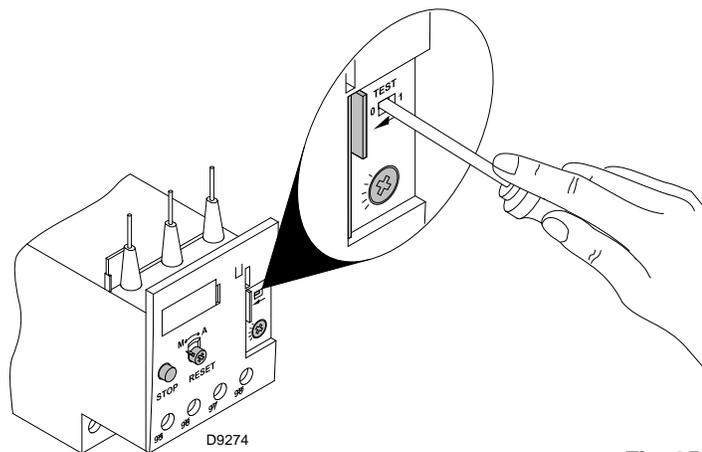


Fig. 35

4.16.2 Electronic thermal relay

- To reset, in the case of an intervention of the thermal relay, press the button "RESET" (Fig. 36).

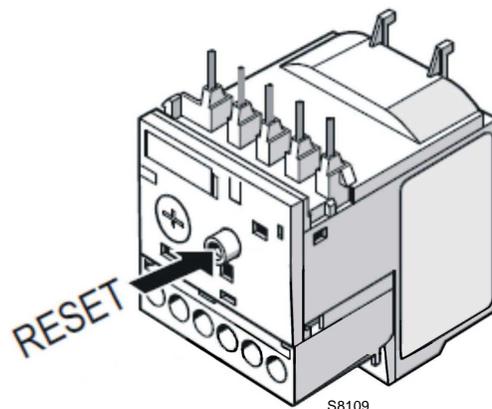


Fig. 36

There are two different solution to test the electronic thermal relay:

- **Device test (Fig. 37)**
Push slowly the button in the window with a little screwdriver.

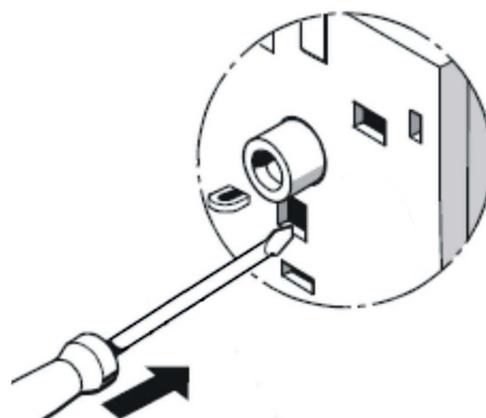


Fig. 37

- **Contact test NC (95-96) and NO (97-98)(Fig. 38)**
Insert in the window a little screwdriver and move it in the sense of the arrow.

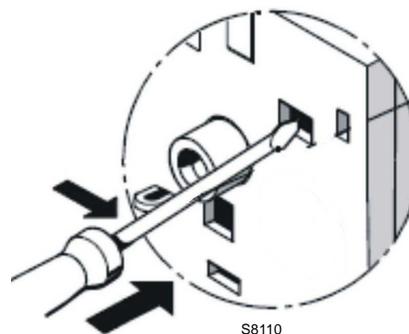


Fig. 38

4.17 Motor connection at 208-230 or 460V

WARNING:

the motors, manufactured for 208-230/460 **IE3 NEMA Premium Efficiency** voltage, have the same connection than **IE2/Epact** motors, but different connection than **IE1** motors no more star/delta but star/double star. Please, pay attention to the indications in case of modification of voltage, maintenance, or substitution.

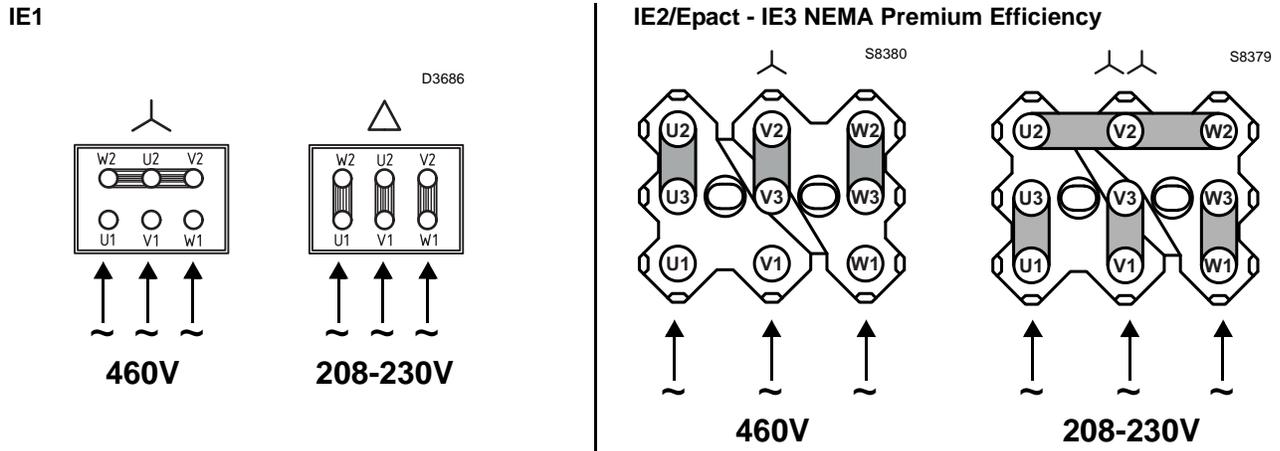


Fig. 39

4.18 Motor connection at 575V

WARNING:

the motors, manufactured for 575V **IE3 NEMA Premium Efficiency** voltage, have the same control box base of the **IE1** and **IE2/Epact** motors. Please pay attention to the indications in case of maintenance or substitution.

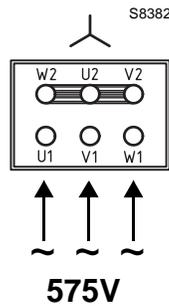


Fig. 40

4.19 Reversible direction

WARNING:

If it is necessary to reverse the direction then reverse the two main supply phases. For example: L1 with L2, there is not difference between **IE1**, **IE2/Epact** and **IE3 NEMA Premium Efficiency**.

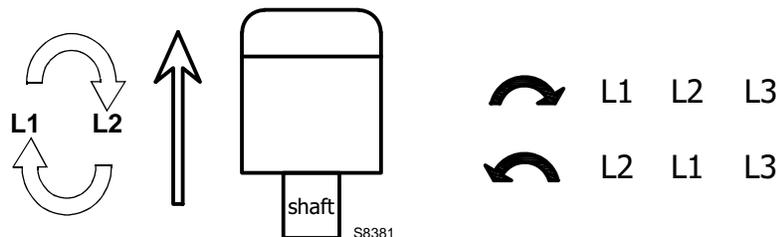


Fig. 41

5

Start-up, calibration and operation of the burner

5.1 Notes on safety for the first start-up



WARNING

The first start-up of the burner must be carried out by qualified personnel, as indicated in this manual and in compliance with the standards and regulations of the laws in force.



WARNING

Check the correct working of the adjustment, command and safety devices.

5.2 Adjustments prior to ignition (light oil)



WARNING

It is recommended to adjust first the light oil burner and then the gas burner.

Carry out the fuel change with burner off.

The optimum calibration of the burner requires an analysis of the flue gases at the boiler outlet and interventions on the following points.

5.2.1 Combustion head setting

The setting of the combustion head depends exclusively on the maximum delivery of the burner.

See information on page 21.

In case of high altitude site, head setting must refer to the “corrected capacity” according procedure described at page 9.

5.2.2 Nozzle

See information on page 22.

5.2.3 Pump adjustment

No settings are required for the pump, which is set to 290 PSI by the manufacturer. This pressure must be checked and adjusted (if required) after the burner has been ignited.

The only operation required in this phase is the application of a pressure gauge on the appropriate pump attachment.

5.2.4 Air damper adjustment

The first time the burner is fired leave the factory setting unchanged for both low and high fire operation.

5.3 Burner firing

Having completed the checks indicated in the previous heading, the pilot of the burner should fire.

If the motor starts but the flame does not appear and the flame safeguard goes into lock-out, reset and wait for a new firing attempt.

Pilot adjustment has been illustrated on Fig. 22, page 24.

Having adjusted the pilot, reconnect the main valve and ignite the main flame; it might require several attempts to purge the air from the gas lines or to adjust the valve with little gas.

Once the burner has fired, now proceed with calibration operations.

5.4 Burner calibration

The optimum calibration of the burner requires an analysis of the flue gases at the boiler outlet.

Adjust successively:

- Firing output
- Maximum burner output
- Minimum burner output
- Intermediate outputs between low and high fire
- Air pressure switch
- Minimum gas pressure switch

5.5 Adjustments before first firing (gas)

Adjustment of the combustion head has been illustrated on page 21.

In addition, the following adjustments must also be made:

- Open manual valves up-stream from the gas train.
- Purge the air from the gas line.
- Adjust the low gas pressure switch to the start of the scale (Fig. 47).
- Adjust the high gas pressure switch to the upper limit of the scale (Fig. 46).
- Adjust the air pressure switch to the zero position of the scale (Fig. 45).
- Fit a U-type manometer (Fig. 42) to the gas pressure test point on the sleeve. The manometer readings are used to calculate MAX. burner power using the diagrams on page 28.

Before starting up the burner it is good practice to adjust the gas train so that ignition takes place in conditions of maximum safety, i.e. with gas delivery at the minimum.

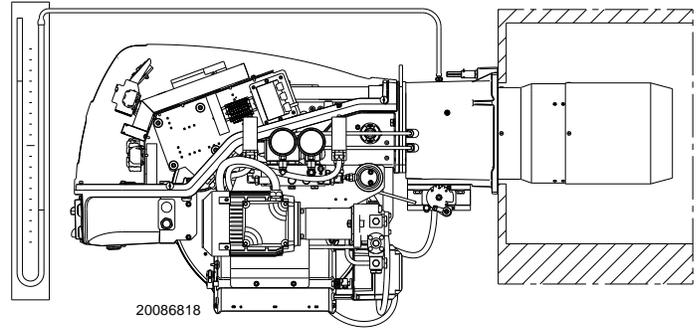


Fig. 42

5.6 Burner start-up

Feed electricity to the burner via the disconnecting switch on the boiler panel.

Close the thermostats/pressure switches, set the parameters on the RWF 55 regulator.

Please refer to the specific manual for this operation.

Turn the switch to position "ON" (Fig. 43) and turn the switch of to position "LOCAL" and turn the switch to position "OIL" for oil operation and "GAS" for gas operation.



Make sure that the lamps or testers connected to the solenoids, or indicator lights on the solenoids themselves, show that no voltage is present. If voltage is present, stop the burner **immediately** and check the electrical wiring.



For the start-up procedure and the parameters calibration, refer to the specific instruction manual of the LMV37... electronic cam supplied with the burner.

5.6.1 Adjusting oil/air delivery

- Switch to the light oil operation.
- During the ignition, move slowly with an approximate adjustment to the oil servomotor at maximum 90°.
- Adjust the maximum pressure on the return nozzle through the "nut and lock-nut" 5)(Fig. 20).
- Adjust the combustion parameter with the air servomotor and store the maximum combustion point.
- Complete the procedure slowly, synchronizing the combustion with the two servomotors.
- Store the different setting points.

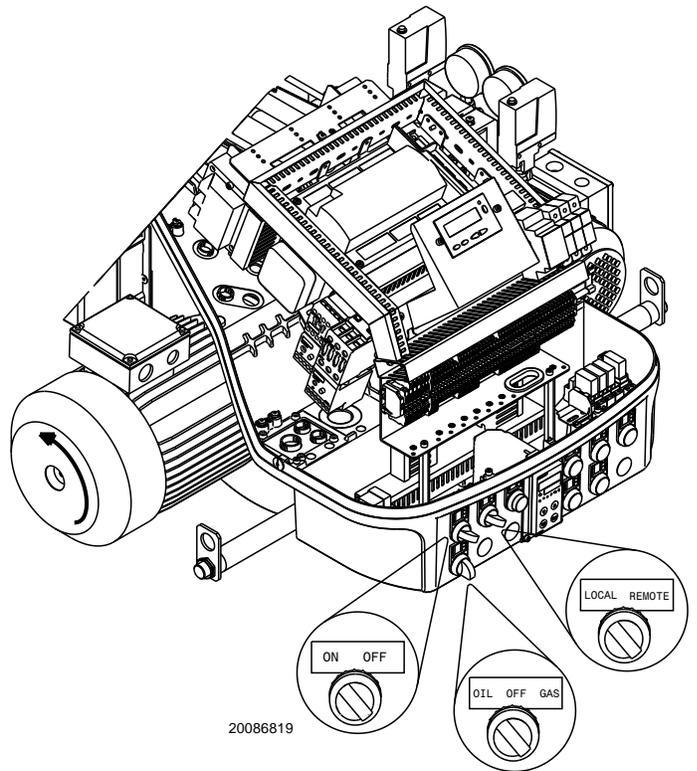


Fig. 43

5.6.2 Adjusting gas/air delivery

- Move slowly towards the maximum output (butterfly gas valve completely open);
- adjust the required maximum output with the gas pressure stabilizer;
- adjust the combustion parameters with the air servomotor and store the maximum combustion point;
- complete the procedure slowly, synchronizing the combustion with the two servomotors and storing the different setting points.

5.7 Final calibration of the pressure switches

5.7.1 Air pressure switch

The air pressure switch is connected in differential (Fig. 45) and is activated by both the negative pressure of the air intake and the air pressure from the fan.

Adjust the air pressure switch (Fig. 44) after having performed all other burner adjustments with the air pressure switch set to the min. of the scale.

With the burner operating at low fire, adjust the pressure switch by slowly turning the relative knob clockwise until the burner locks out.

Then turn the knob counter-clockwise about 20% of the set point and start-up the burner again to ensure the set point is correct.

If the burner locks out again, turn the knob counter-clockwise a little bit more.



Fig. 44

5.7.2 Maximum gas pressure switch

Adjust the maximum gas pressure switch after having performed all other burner adjustments with the maximum gas pressure switch set to the end of the scale (Fig. 46).

With the burner operating at MAX output, reduce the adjustment pressure by slowly turning the adjustment dial anticlockwise until the burner locks out.

Then turn the dial clockwise by 0.8" WC and repeat burner firing.

If the burner locks out again, turn the dial again clockwise by 0.4" WC.

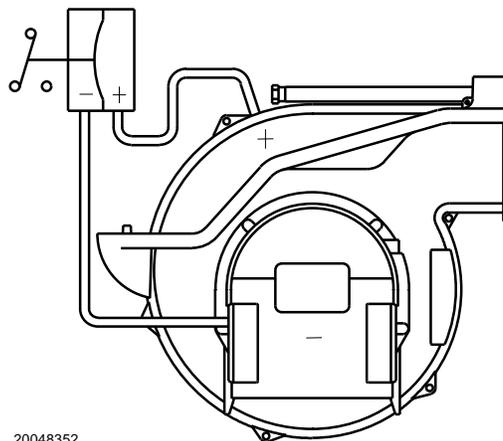


Fig. 45

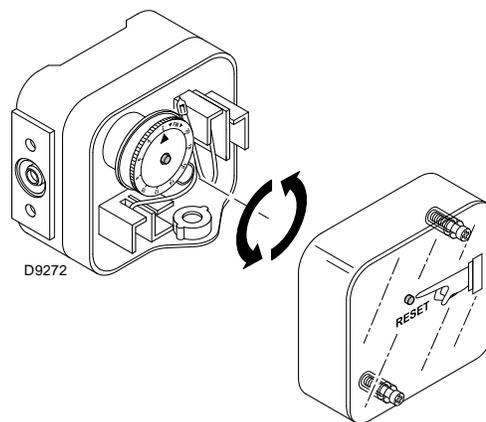


Fig. 46

5.7.3 Minimum gas pressure switch

Adjust the minimum gas pressure switch after having performed all the other burner adjustments with the pressure switch set at the start of the scale (Fig. 47).

With the burner operating at MAX output, increase adjustment pressure by slowly turning the relative dial clockwise until the burner locks out.

Then turn the dial anti-clockwise by 0.8" WC and repeat burner starting to ensure it is uniform.

If the burner locks out again, turn the dial anti-clockwise again by 0.4" WC.

5.7.4 Low oil pressure switch

The low oil pressure switch is factory set to 261 PSI (18 bar).

If the oil pressure goes down this value in the delivery piping, the pressure switch stops the burner.

Burner starts again automatically if the pressure goes above 261 PSI (18 bar) after burner start up.

5.7.5 High oil pressure switch

The high oil pressure switch is factory set to 43.5 PSI (3 bar).

If the oil pressure goes above this value in the return piping, the pressure switch stops the burner.

Burner starts again automatically if the pressure goes down under 43.5 PSI (3 bar) after burner shut down.

If a loop circuit with Px pressure feeds the burner, the pressure switch should be adjusted to Px + 43.5 PSI.

For the adjustment, see (Fig. 48).

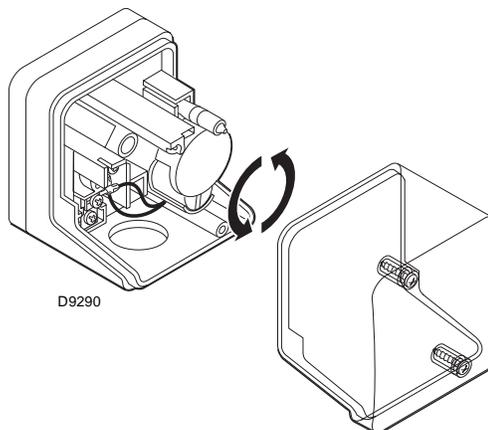


Fig. 47

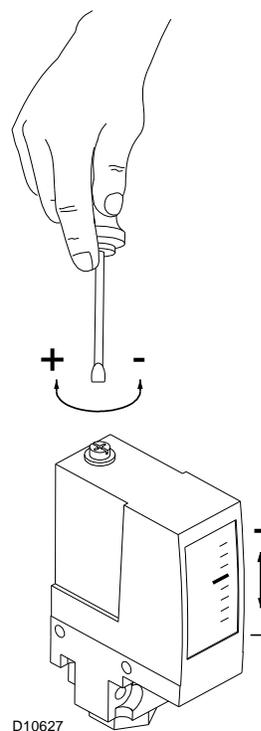


Fig. 48

5.8 Burner starting

- Operating control closes, the motor starts.
The pump 3) (Fig. 49) draws the fuel from the tank through the piping 1) and pumps it under pressure for delivery.
The piston 4) rises and the fuel returns to the tank through the piping 5) - 7).
The screw 6) closes the by-pass heading towards suction and the de-energized solenoid valves 8) - 9) - 2) close the passage to the nozzle.
- Air damper and pressure regulator are positioned on MIN output.
- Ignition electrode strikes a spark.
- Solenoid valves 8) - 9) - 2) open; the fuel passes through the piping 10) and filter 11), and enters the nozzle.
A part of the fuel is then sprayed out through the nozzle, igniting when it comes into contact with the spark: flame at a low output level; the rest of the fuel passes through piping 12) at the pressure adjusted by the regulator 13), then, through piping 7), it goes back into the tank.
- The spark goes out.
- The starting cycle ends.

5.8.1 Steady state operation

At the end of the starting cycle, the servo-motor control then passes to load control for boiler pressure or temperature.

- If the temperature or pressure is low (and the load control is consequently closed), the burner progressively increases output up to MAX.
- If subsequently the temperature or pressure increases until the load control opens, the burner progressively decreases output down to MIN.
- The burner shuts off when demand for heat is less than the heat supplied by the burner in the MIN output.
- The servomotor returns to the 0° angle limited by contact with cam 2. The air damper closes completely to reduce thermal dispersion to a minimum.

Every time output is changed, the servomotor automatically modifies oil delivery (pressure regulator) and air delivery (fan damper).

5.8.2 Firing failure

- If the burner does not fire, it goes into lock-out within 3 sec. of the opening of the light oil valve.
- If the flame should go out for accidental reasons during operation, the burner will lock out in 1 s.

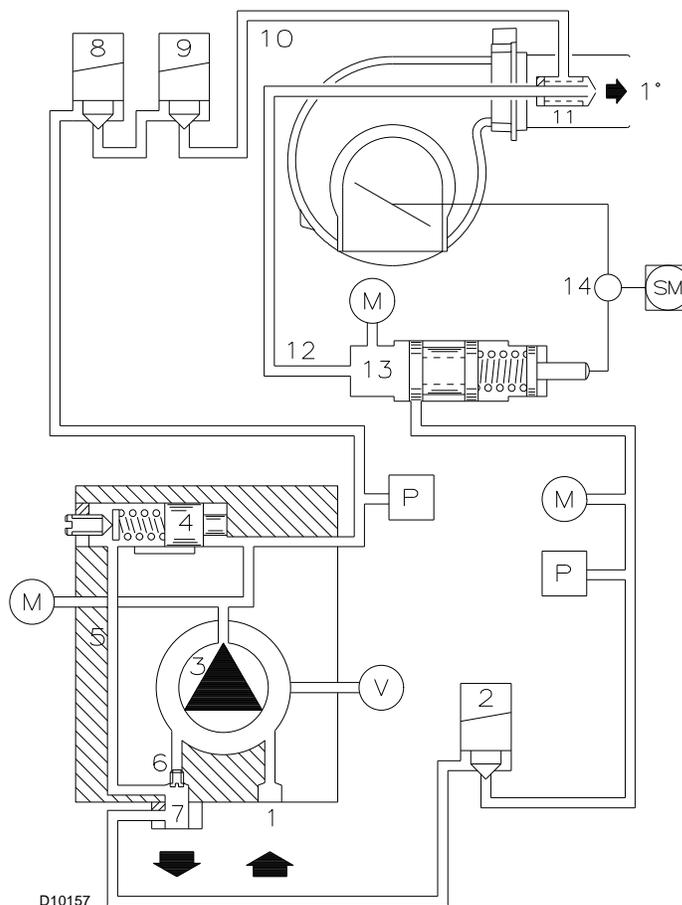


Fig. 49

5.9 Flame signal measurement


Check the flame signal through the parameter 954, as indicated in Fig. 50. The displayed value is expressed in percentage.

The value during the operation must be higher than 24%. If at the burner start-up the value is higher or equal of 18%, the burner locks out due to the extraneous light.

For further and specific information, please refer to the specific instruction manual.

The display (Fig. 50) shows parameter **954**: flashing on the left. On the right, the flame's intensity is displayed as a percentage.

Example: **954: 0.0**

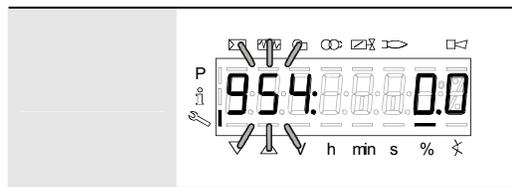

S8171

Fig. 50

5.10 Final checks (with the burner working)

<ul style="list-style-type: none"> ➤ Open the control limit operation ➤ Open the high limit operation 	➡	The burner must stop
<ul style="list-style-type: none"> ➤ Rotate the maximum gas pressure switch knob to the minimum end-of-scale position ➤ Rotate the air pressure switch knob to the maximum end of scale position ➤ Rotate the maximum oil pressure switch at the minimum of the scale 	➡	The burner must stop in lockout
<ul style="list-style-type: none"> ➤ Switch off the burner and disconnect the voltage ➤ Disconnect the minimum gas pressure switch ➤ Rotate the minimum low oil pressure switch at the maximum of the scale 	➡	The burner must not start
<ul style="list-style-type: none"> ➤ Cover the UV flame sensor 	➡	The burner must stop in lockout due to firing failure

Tab. N



WARNING

Make sure that the mechanical locking systems on the different adjustment devices are fully tightened.

6

Maintenance

6.1 Notes on safety for the maintenance

The periodic maintenance is essential for the good operation, safety, yield and duration of the burner.

It allows you to reduce consumption and polluting emissions and to keep the product in a reliable state over time.



DANGER

The maintenance interventions and the calibration of the burner must only be carried out by qualified, authorised personnel, in accordance with the contents of this manual and in compliance with the standards and regulations of current laws.

Before carrying out any maintenance, cleaning or checking operations:



DANGER

Disconnect the electrical supply from the burner by means of the main system switch.



DANGER

Turn off the fuel interception tap.



Wait for the components in contact with heat sources to cool down completely.

6.2 Maintenance programme

6.2.1 Maintenance frequency



The gas combustion system should be checked at least once a year by a representative of the manufacturer or another specialised technician.

6.2.2 Checking and cleaning



The operator must use the required equipment during maintenance.

Combustion

The optimum calibration of the burner requires an analysis of the flue gases. Significant differences with respect to the previous measurements indicate the points where more care should be exercised during maintenance.

Combustion head

Open the burner and make sure that all components of the combustion head are in good condition, not deformed by the high temperatures, free of impurities from the surroundings and correctly positioned. If in doubt, disassemble the elbow fitting 7)(Fig. 53, page 41).

Burner

Check for excess wear or loose screws. Also make sure that the screws securing the electrical leads in the burner connections are fully tightened.

Clean the outside of the burner.

Flame inspection window

Clean the flame inspection window 1)(Fig. 51).

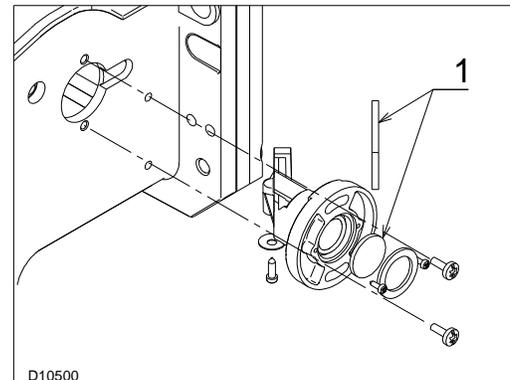


Fig. 51

Nozzles

It is advisable to replace nozzles once a year during periodical maintenance.

Do not clean the nozzle openings;

Hoses

Check that these are in good conditions.

Fan

Check to make sure that no dust has accumulated inside the fan or on its blades, as this condition will cause a reduction in the air flow rate and provoke polluting combustion.

UV scanner

In order to reach the UV scanner, proceed as follows:

- Extract the UV scanner 2).
- Clean the glass cover from any dust that may have accumulated.

Gas leaks

Make sure that there are no gas leaks on the pipework between the gas meter and the burner.

Gas filter

Change the gas filter when it is dirty.

Boiler

Clean the boiler as indicated in its accompanying instructions in order to maintain all the original combustion characteristics intact, especially the flue gas temperature and combustion chamber pressure.

Fuel tank

Approximately every 5 years, suck any water on the bottom of the tank using a separate pump.

Combustion

Adjust the burner if the combustion values found at the beginning of the operation do not comply with the regulations in force, or at any rate, do not correspond to good combustion.

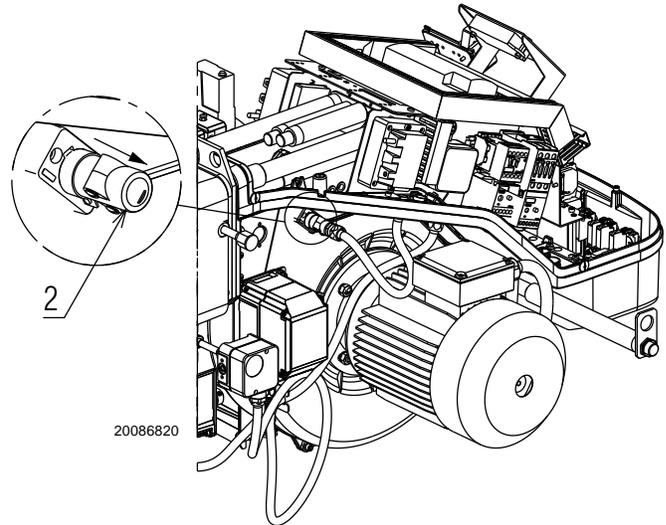


Fig. 52

6.3 Opening the burner



Disconnect the electrical supply from the burner by means of the main system switch.



Close the fuel interception tap.



Wait for the components in contact with heat sources to cool down completely.

- loosen screws 1) and with draw the cover 2);
- disengage the swivel coupling 7) from the graduated sector;
- disconnect the light-oil pipes 8);
- remove screws 3) and pull the burner back by about 4" on the slide bars. disconnect the electrode leads.
- Install the extension bars 31) Fig. 6, page 12 and re-screw the 2 screws and the safety plate Fig. 12, page 20.
- Pull the burner fully back.
- Now extract the internal part 5) after having removed the screw 6).

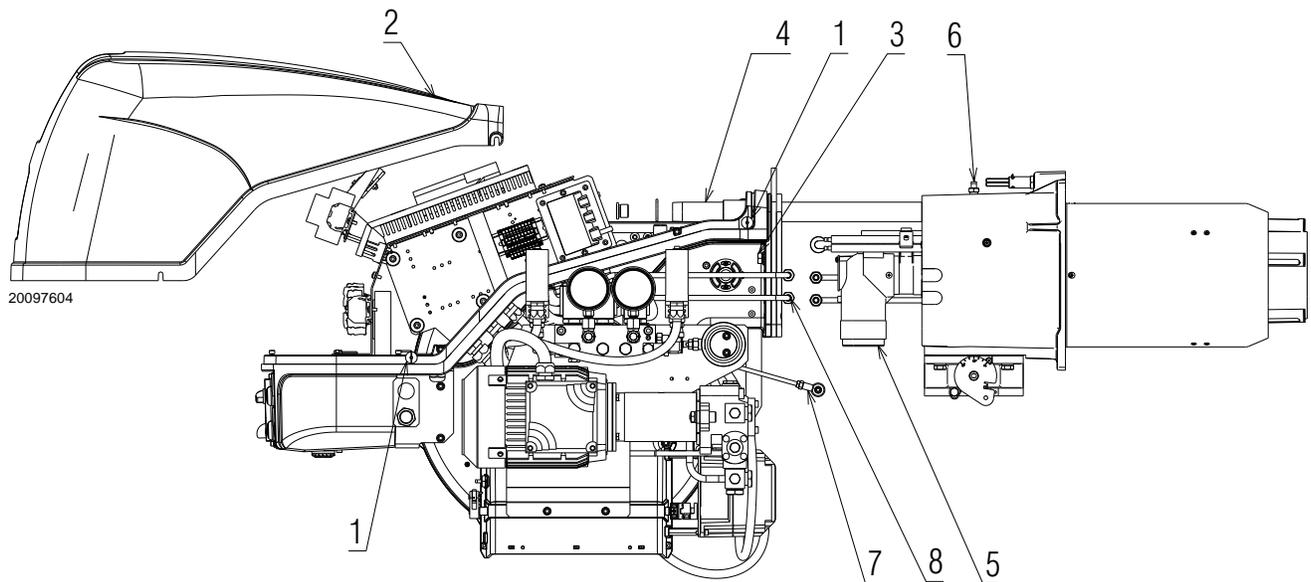


Fig. 53

6.4 Closing the burner

To close the burner proceed as follows:

- push the burner until it is about 4" from the sleeve;
- re-connect the leads.
- Remove the extension bars 31)(Fig. 6, page 12).
- Slide in the burner until it comes to a stop;
- refit screws 3) and pull the leads gently out until they are slightly stretched;
- re-couple the swivel coupling 7) to the graduated sector;
- reconnect the light-oil pipes.
- Re-screw the 2 screws and the safety plate (Fig. 12, page 20).



After carrying out maintenance, cleaning or checking operations, reassemble the hood and all the safety and protection devices of the burner.

7 **Faults - Possible causes - Solutions**

If faults arise in ignition or operations, the burner performs a "safety stop", which is signalled by the red burner lockout LED.

The display visualises alternately the lockout code and the relative diagnostic. To reset the start-up conditions, refer to the "Reset procedure" indicated in the control box manual supplied.

When the burner starts again, the red LED goes out and the control box is reset.

**WARNING**

In the event of a burner lockout, more than two consecutive burner reset operations could cause damage to the installation. On the third lockout, contact the Aftersales Service.

**DANGER**

If further lockouts or burner faults occur, interventions must only be made by qualified, authorised personnel (as indicated in this manual, and in compliance with the laws and regulations currently in force).

N.	CODE			DESCRIPTION	BURNER SERIAL NUMBER	*
		RLS 160/E	RLS 200/E			
1	3014083	•		AIR DAMPER ASSEMBLY	≤ 02413xxxxxx	
1	20073258	•		AIR DAMPER ASSEMBLY	≥ 02423xxxxxx	
1	20073258	•	•	AIR DAMPER ASSEMBLY		
2	3013683	•	•	PROTECTION GRATE		
3	3013682	•	•	SOUND DAMPING		
4	3003763	•	•	INSPECTION WINDOW		
5	3013686	•	•	BAR EXTENSION		
6	3012976	•	•	FAN		C
7	20086561	•	•	COVER		B
8	20075921	•	•	VIEWING PORT		
9	20014366	•	•	FUSE HOLDER		
10	20028328	•	•	SUPPORT		A
11	20027432	•	•	STARTER		C
12	20027018	•	•	RED SIGNAL LIGHT		A
13	20027020	•	•	YELLOW SIGNAL LIGHT		A
14	20027021	•	•	SELECTOR SWITCH		C
15	3013095	•	•	CONNECTOR		C
16	3005482	•	•	SEAL		B
17	3013926	•	•	DISPLAY		
18	20028329	•	•	ELECTRONIC CAM		C
19	20096592	•	•	POWER REGULATOR		
20	3013940	•	•	CONNECTORS ASSEMBLY		B
21	3012978	•	•	MOTOR 230/460V		C
21	3014152	•	•	MOTOR 575V		C
22	3014106	•	•	FUSE 6,3A		A
23	20036017	•	•	GREEN SIGNAL LIGHT		
24	20115421	•	•	STARTER 460V		C
24	20115409	•		STARTER 575V		C
25	20027014	•	•	WHITE SIGNAL LIGHT		
26	3013681	•	•	SCREW		
27	3003891	•	•	CONNECTOR		C
28	3014079	•	•	SPACER		
29	20043329	•	•	TIMER		B
30	3012393	•		HIGH VOLTAGE LEAD	≤ 02350005804	A
30	20030010	•		HIGH VOLTAGE LEAD	> 02350005804	A
30	20030010	•		HIGH VOLTAGE LEAD		A
31	20028332	•		ELECTRODE	≤ 02350005804	A
31	20030011	•		ELECTRODE	> 02350005804	A
31	20030011	•		ELECTRODE		A
32	20008601	•	•	SERVOMOTOR		
33	3013181	•		TUBE		A
33	3014130	•		TUBE		A
34	20028334	•		DIFFUSER DISC		
34	20038055	•		DIFFUSER DISC		
35	20028335	•		DISTRIBUTOR		

N.	CODE	RLS 160/E	RLS 200/E	DESCRIPTION	BURNER SERIAL NUMBER	*
35	20038057			• DISTRIBUTOR		
36	20028336			• • ELECTRODE		
37	20028337			• • IGNITION PILOT TUBE		C
38	20028338			• • EXTERIOR TUBE		A
39	3012637			• ELBOW		
39	20031020			• ELBOW		
40	20027422			• • SELECTOR SWITCH		C
41	3007891			• • SEAL		B
42	3013055			• • TUBE		A
43	3012969			• • GAS PRESSURE SWITCH		B
44	3012956			• • TRANSFORMER		B
45	3006096			• • GAS REGULATOR		C
46	3012938			• • TRANSFORMER		B
47	3012841			• • BASE		
48	20010969			• • RELAY		C
49	3012948			• • AIR PRESSURE SWITCH		A
50	3003643			• • PLUG		
51	20010962			• • BUTTON		
52	20028411			• • SELECTOR SWITCH		C
53	3012049			• • SCREW		
54	3012639			• • CONTROL DEVICE		
55	3012640			• • CYLINDER		
56	3012641			• • SQUARE		
57	20086579			• • UV PHOTOCCELL		A
58	3012643			• • END CONE		
59	3020071			• • BASE		
60	3003322			• • CONNECTOR		C
61	3012794			• • INSPECTION WINDOW		
62	3020068			• • RELAY		B
63	3013938			• • DISC		
64	3013937			• • HUB		C
65	20028379			• • GRADUATE SECTOR		
66	3012642			• • SHUTTER		
67	3012647			• • CENTERING SUPPORT		
68	3013178			• • SHUTTER		
69	3007079			• • SEAL		B
70	3013188			• • CONNECTOR		C
71	3006784			• • CONNECTOR		C
72	3003006			• • BAR		C
73	20030708			• • RELAY		B
74	20028381			• • TUBE		A
75	20028382			• • TUBE		A
76	20028383			• • TUBE		A
77	20028384			• • TUBE		A
78	20028385			• • CONNECTOR		C

N.	CODE	RLS		DESCRIPTION	BURNER SERIAL NUMBER	*
		160/E	200/E			
79	3003204	•	•	SEAL		B
80	3007150	•	•	O-RING		B
81	3003287	•	•	COIL		
82	20028386	•	•	MODULATOR		
83	3006723	•	•	CONNECTOR		C
84	3009081	•	•	CONNECTOR		C
85	3012126	•	•	CONNECTOR		C
86	3003200	•	•	NUT		
87	3014179	•	•	CONNECTOR		C
88	3013462	•	•	CONNECTOR		C
89	3013674	•	•	PRESSURE SWITCH		B
90	3012384	•	•	PRESSURE SWITCH		B
91	3006140	•	•	PRESSURE GAUGE		A
92	3013531	•	•	VALVE BODY ASSEMBLY		
93	20028389	•	•	TUBE		A
94	20028390	•	•	TUBE		A
95	3006157	•	•	PUMP		C
96	3012949	•	•	CONNECTOR		C
97	3007164	•	•	SEAL		B
98	3006184	•	•	BAR		
99	20028392	•	•	JOINT		
100	20028394	•	•	DRIVE COUPLING		A
101	20031015	•	•	MOTOR 230/460V		C
101	20062588	•	•	MOTOR 575V		C
102	3013259	•	•	BEARING		
103	3013257	•	•	BEARING		
104	20028396	•	•	LEVER		C
105	3006098	•	•	PIN JOINT		
106	20028397	•	•	TIE ROD		
107	20028398	•	•	SHAFT		
108	3012393	•	•	HIGH VOLTAGE LEAD		A
109	20028400	•	•	BASE		
110	20031413	•	•	HORN		

*

ADVISED PARTS

A = Spare parts for minimum fittings

A+B = Spare parts for basic safety fittings

A+B+C = Spare parts for extended safety fittings

B

Appendix - Accessories

- **Gas train according to UL Standards**



The installer is responsible for the supply and installation of any required safety device(s) not indicated in this manual.

C**Appendix - Burner start up report**

Model number:	_____	Serial number:	_____
Project name:	_____	Start-up date:	_____
Installing contractor:	_____	Phone number:	_____

GAS OPERATION

Gas Supply Pressure:	_____	CO ₂ : Low Fire	_____	High Fire	_____
Main Power Supply:	_____	O ₂ : Low Fire	_____	High Fire	_____
Control Power Supply:	_____	CO: Low Fire	_____	High Fire	_____
Burner Firing Rate:	_____	NO _x : Low Fire	_____	High Fire	_____
Manifold Pressure:	_____	Net Stack Temp - Low Fire:	_____	High Fire	_____
Pilot Flame Signal:	_____	Comb. Efficiency - Low Fire:	_____	High Fire	_____
Low Fire Flame Signal:	_____	Overfire Draft:	_____		
High Fire Flame Signal:	_____				

OIL OPERATION

Oil supply pressure:	_____	CO ₂ : Low Fire	_____	High Fire	_____
Oil suction pressure:	_____	O ₂ : Low Fire	_____	High Fire	_____
Control Power Supply:	_____	CO: Low Fire	_____	High Fire	_____
Burner Firing Rate:	_____	NO _x : Low Fire	_____	High Fire	_____
Low Fire Flame Signal:	_____	Net Stack Temp - Low Fire:	_____	High Fire	_____
High Fire Flame Signal:	_____	Comb. Efficiency - Low Fire:	_____	High Fire	_____
Low Fire Nozzle Size:	_____	Overfire Draft:	_____		
High Fire Nozzle Size:	_____	Smoke number:	_____		

CONTROL SETTINGS

Operating Setpoint:	_____	Low Oil Pressure:	_____
High Limit Setpoint:	_____	High Oil Pressure:	_____
Low Gas Pressure:	_____	Flame Safeguard Model Number:	_____
High Gas Pressure:	_____	Modulating Signal Type:	_____

NOTES

RIELLO

RIELLO S.p.A.
I-37045 Legnago (VR)
Tel.: +39.0442.630111
[http:// www.riello.com](http://www.riello.com)

RIELLO

35 Pond Park Road
Hingham, Massachusetts,
U.S.A. 02043

RIELLO BURNERS NORTH AMERICA
<http://www.riello.ca>

1-800-4-RIELLO

2165 Meadowpine Blvd
Mississauga, Ontario
Canada L5N 6H6